




Installation step 1-6

Montering step 1-6


FOR NORTH AMERICA SEE LAST PAGE!

HOW TO SEAL FIBO WALL PANELS
For watertight system, apply Fibo Seal as shown beneath. All cutting surfaces must be sealed, also when drilling holes for pipe penetration. Incorrect installation will void your warranty. Use Fibo Clean and Fibo Wipes to remove excessive sealant. Film from cleaning accessories shall be removed immediately from panel surface.

HVORDAN FUGE FIBO VEGGPANEL
For vanntett system, påfør Fibo Seal som vist under. Alle kuttflater skal forsegles også ved hulltaking til rengjøring. Ved mangelfull montering bortfaller garanti. Bruk Fibo Clean og Fibo Wipes for å fjerne overflødig fugemasse. Film fra rengjøringstilbehør skal fjernes umiddelbart fra panelene.

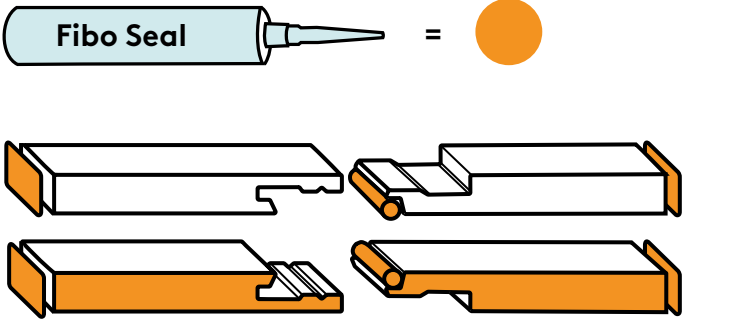


1 BACKWALL OPTIONS * VELG RIKTIG BAKVEGG

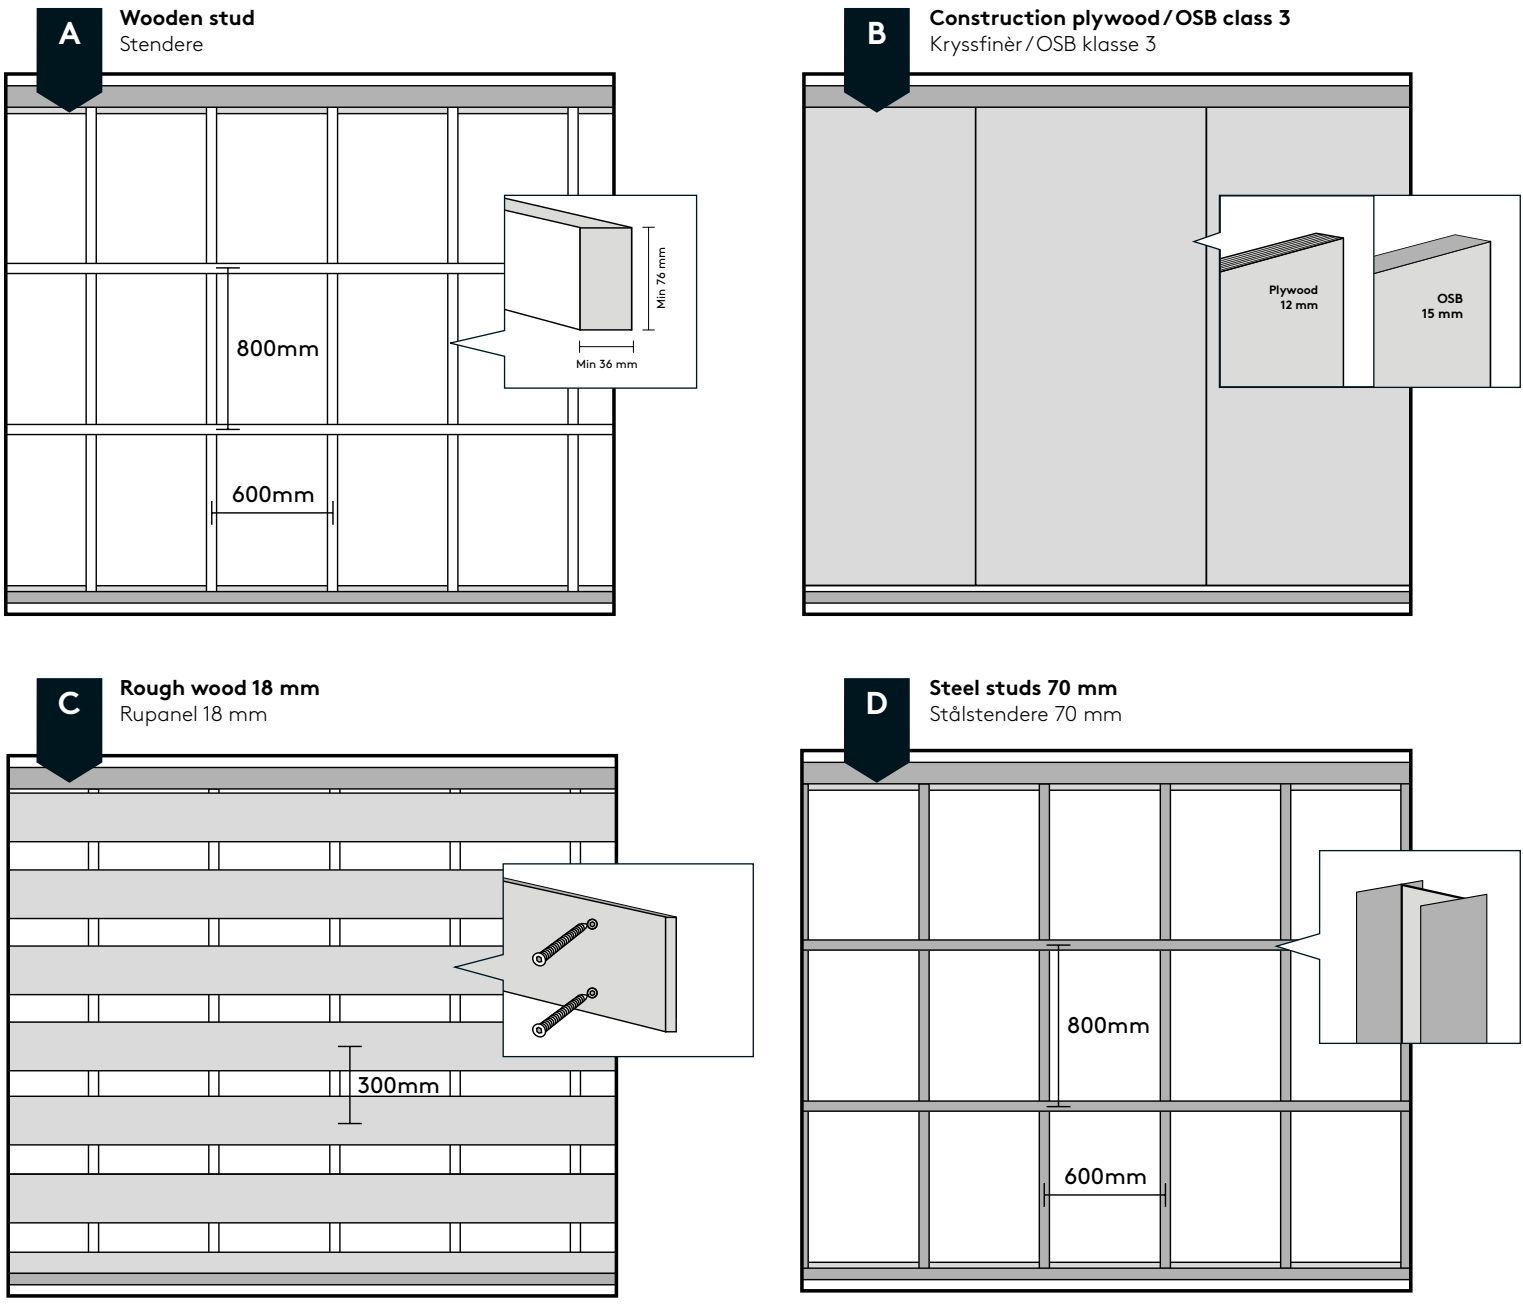


* For alternative backwall in selected markets, visit fibosystem.com


2 CHOOSE PANEL FIXING VELG FESTEMETODE FOR PANEL

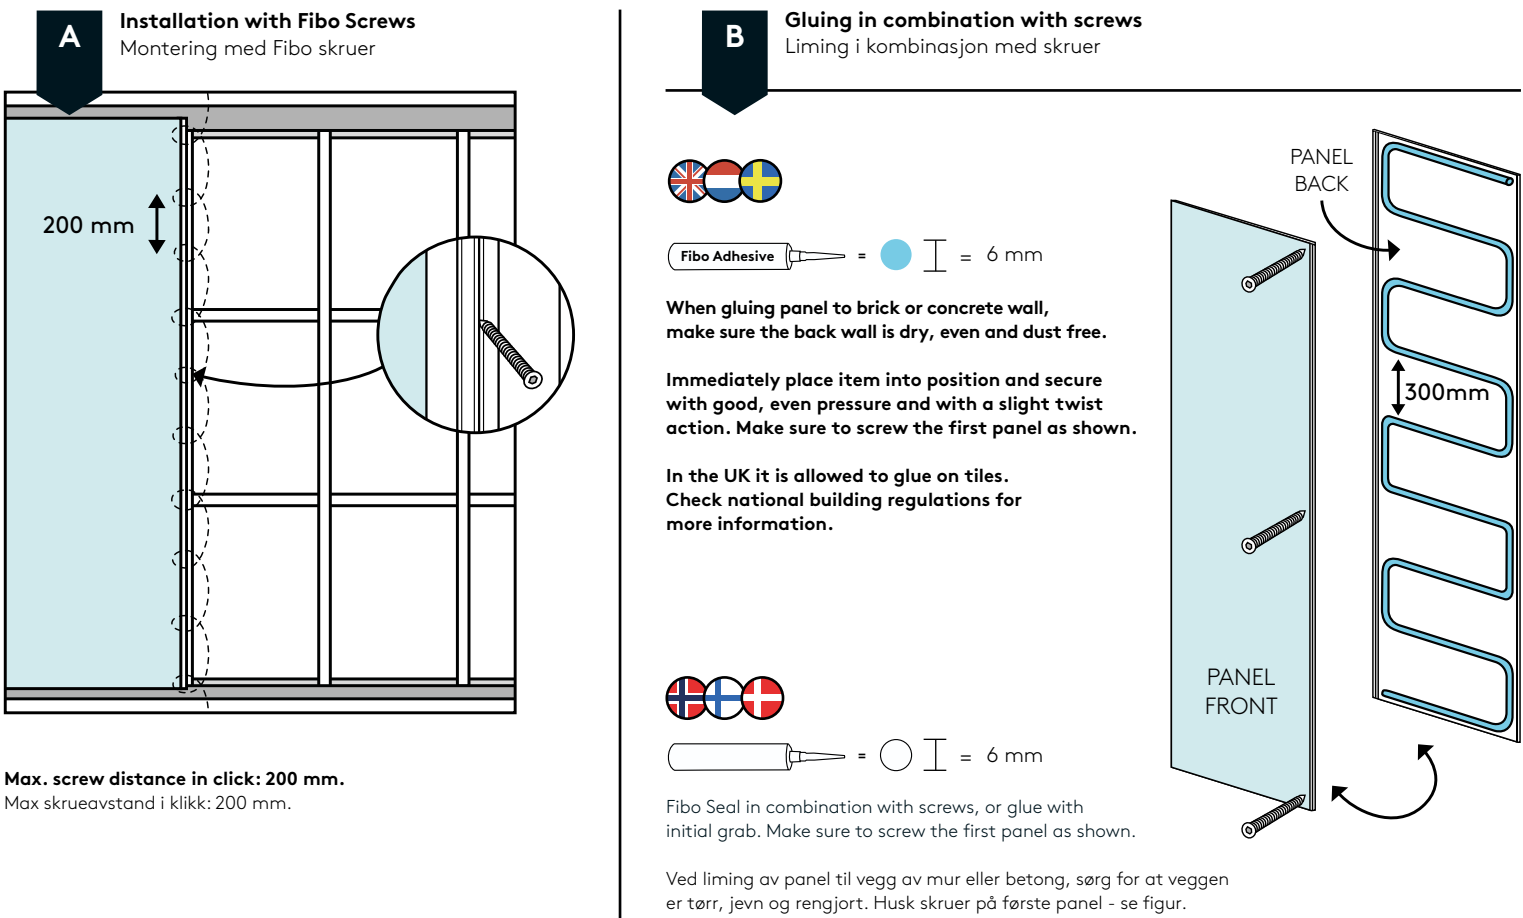


3 CHOOSE SOLUTION FOR APERTURES FOR PIPES VELG LØSNING FOR RØRGJENNOMFØRING

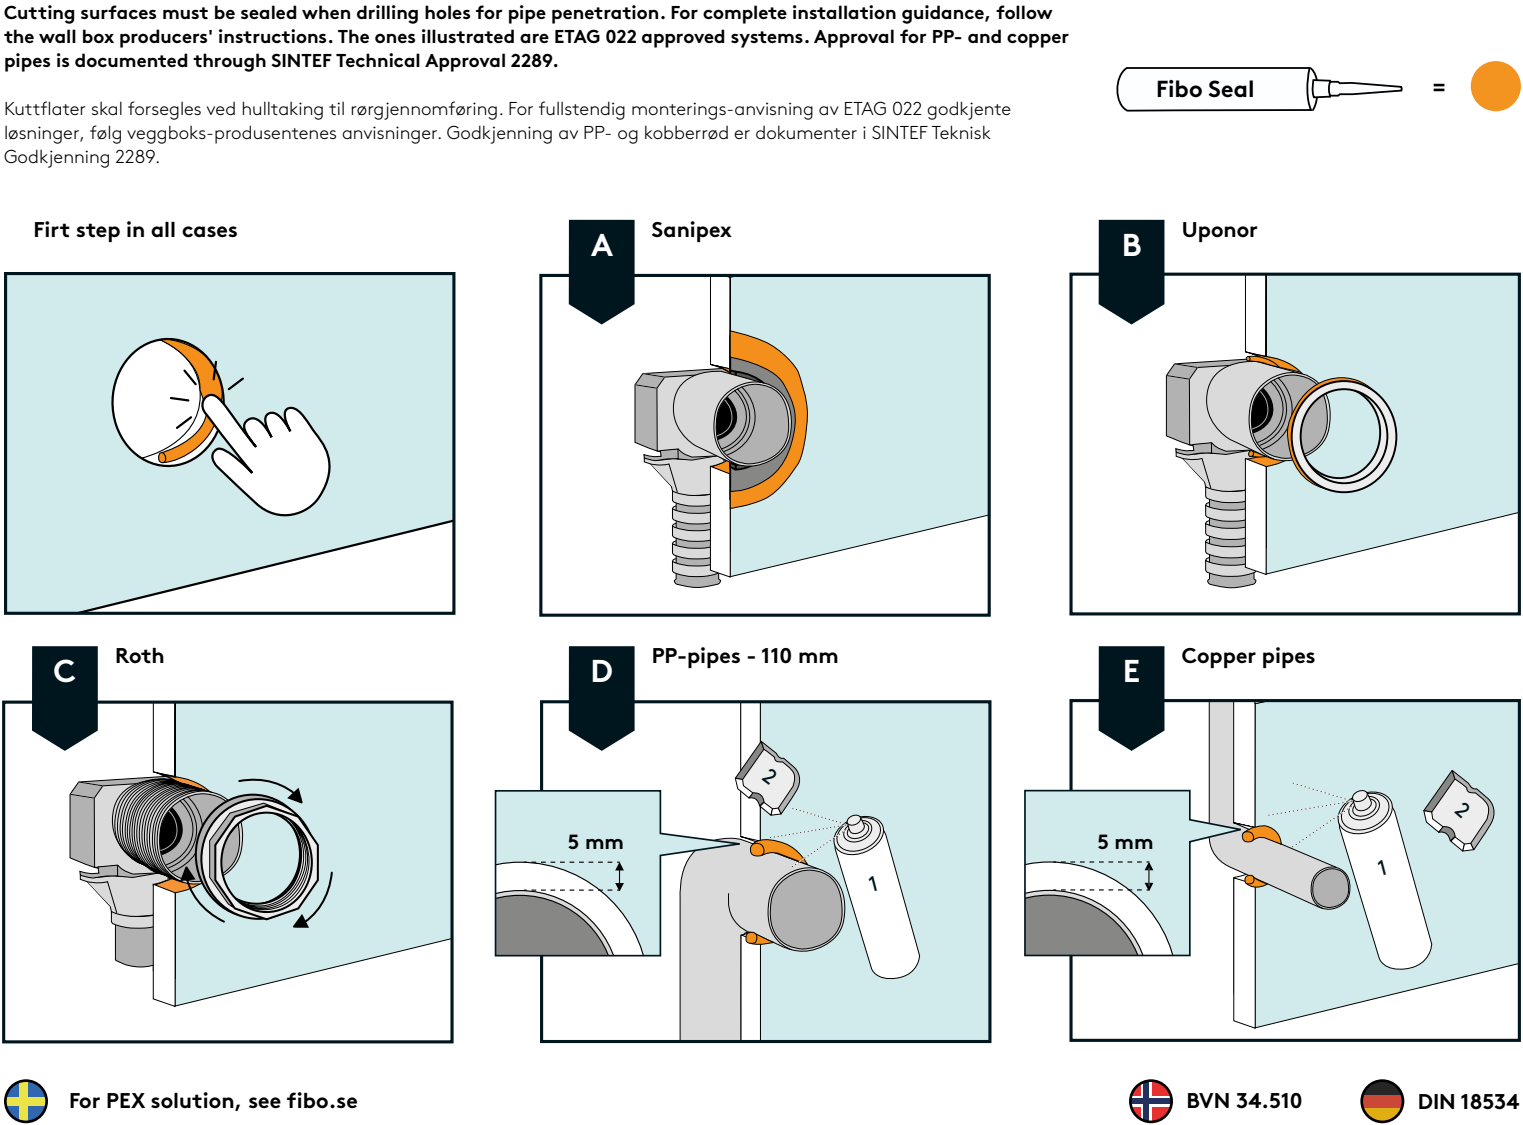

4 STACKING PROFILE | EXTERNAL CORNER PROFILE | SEALING FINISH * SKJØTEPROFIL | UTVENDIG HJØRNEPROFIL | AVSLUTNING MOT TAK

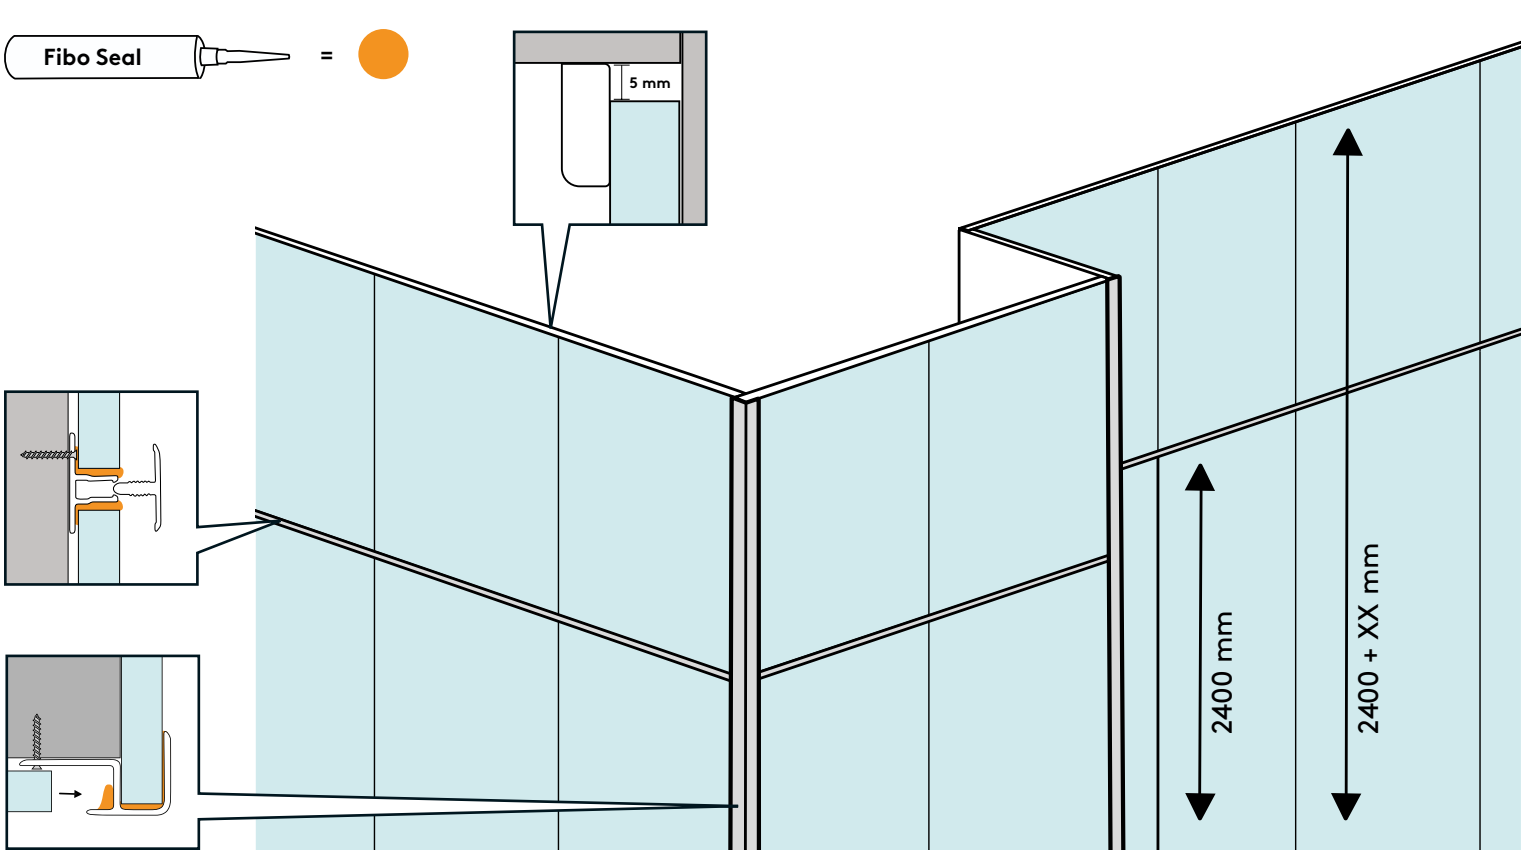


5 CHOOSE TRANSITION TO FLOOR MEMBRANE AVSLUTNING MOT GULVMEMBRAN

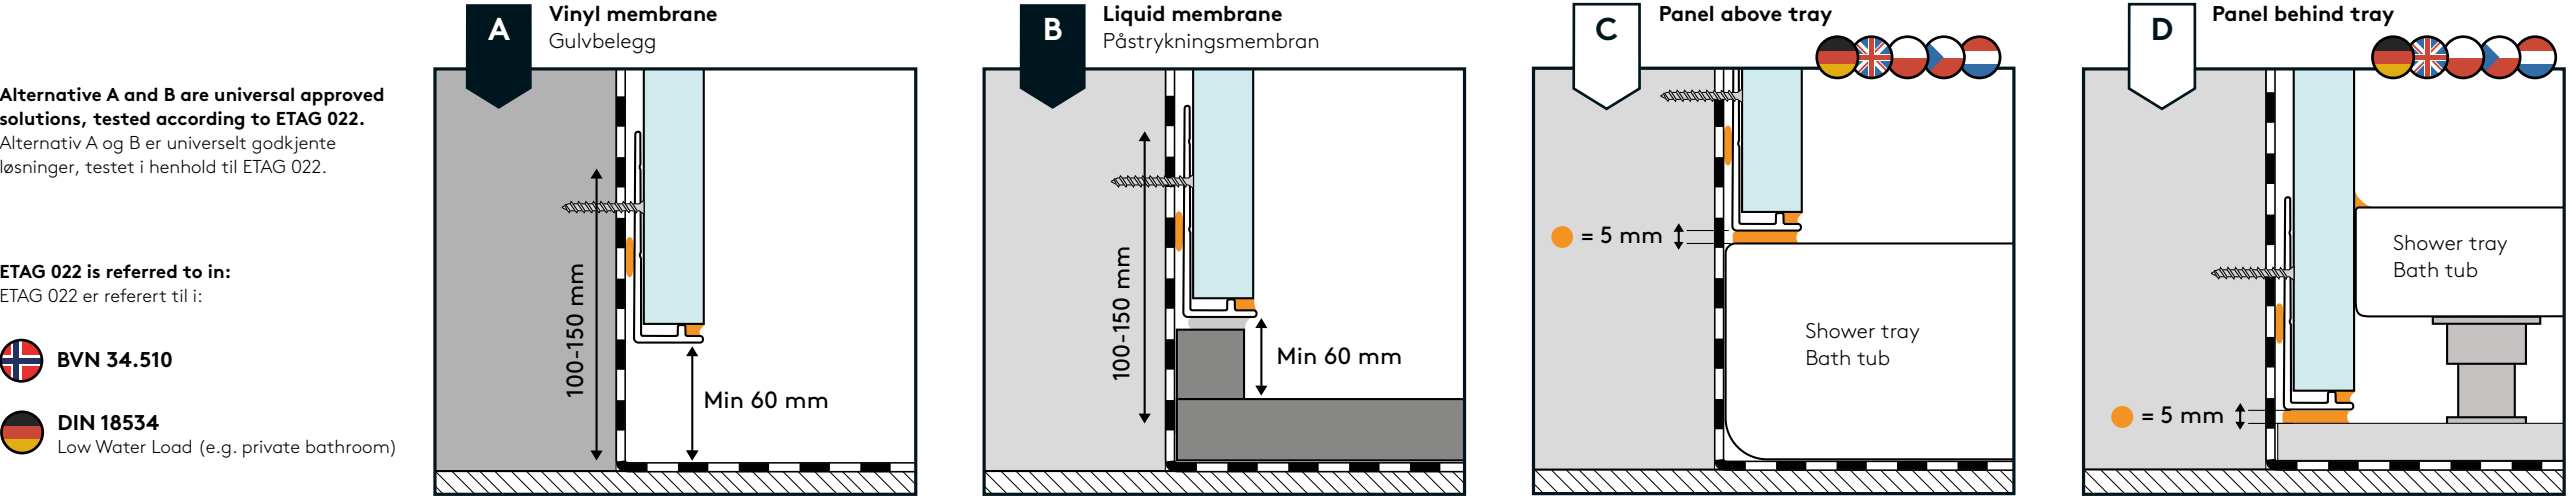


6 CHOOSE PREFERRED CORNER PROFILE A, B OR C VELG HJØRNEPROFIL A, B ELLER C

A 2-PART INTERNAL CORNER PROFILE* 2-DELT INNVENDIG HJØRNEPROFIL

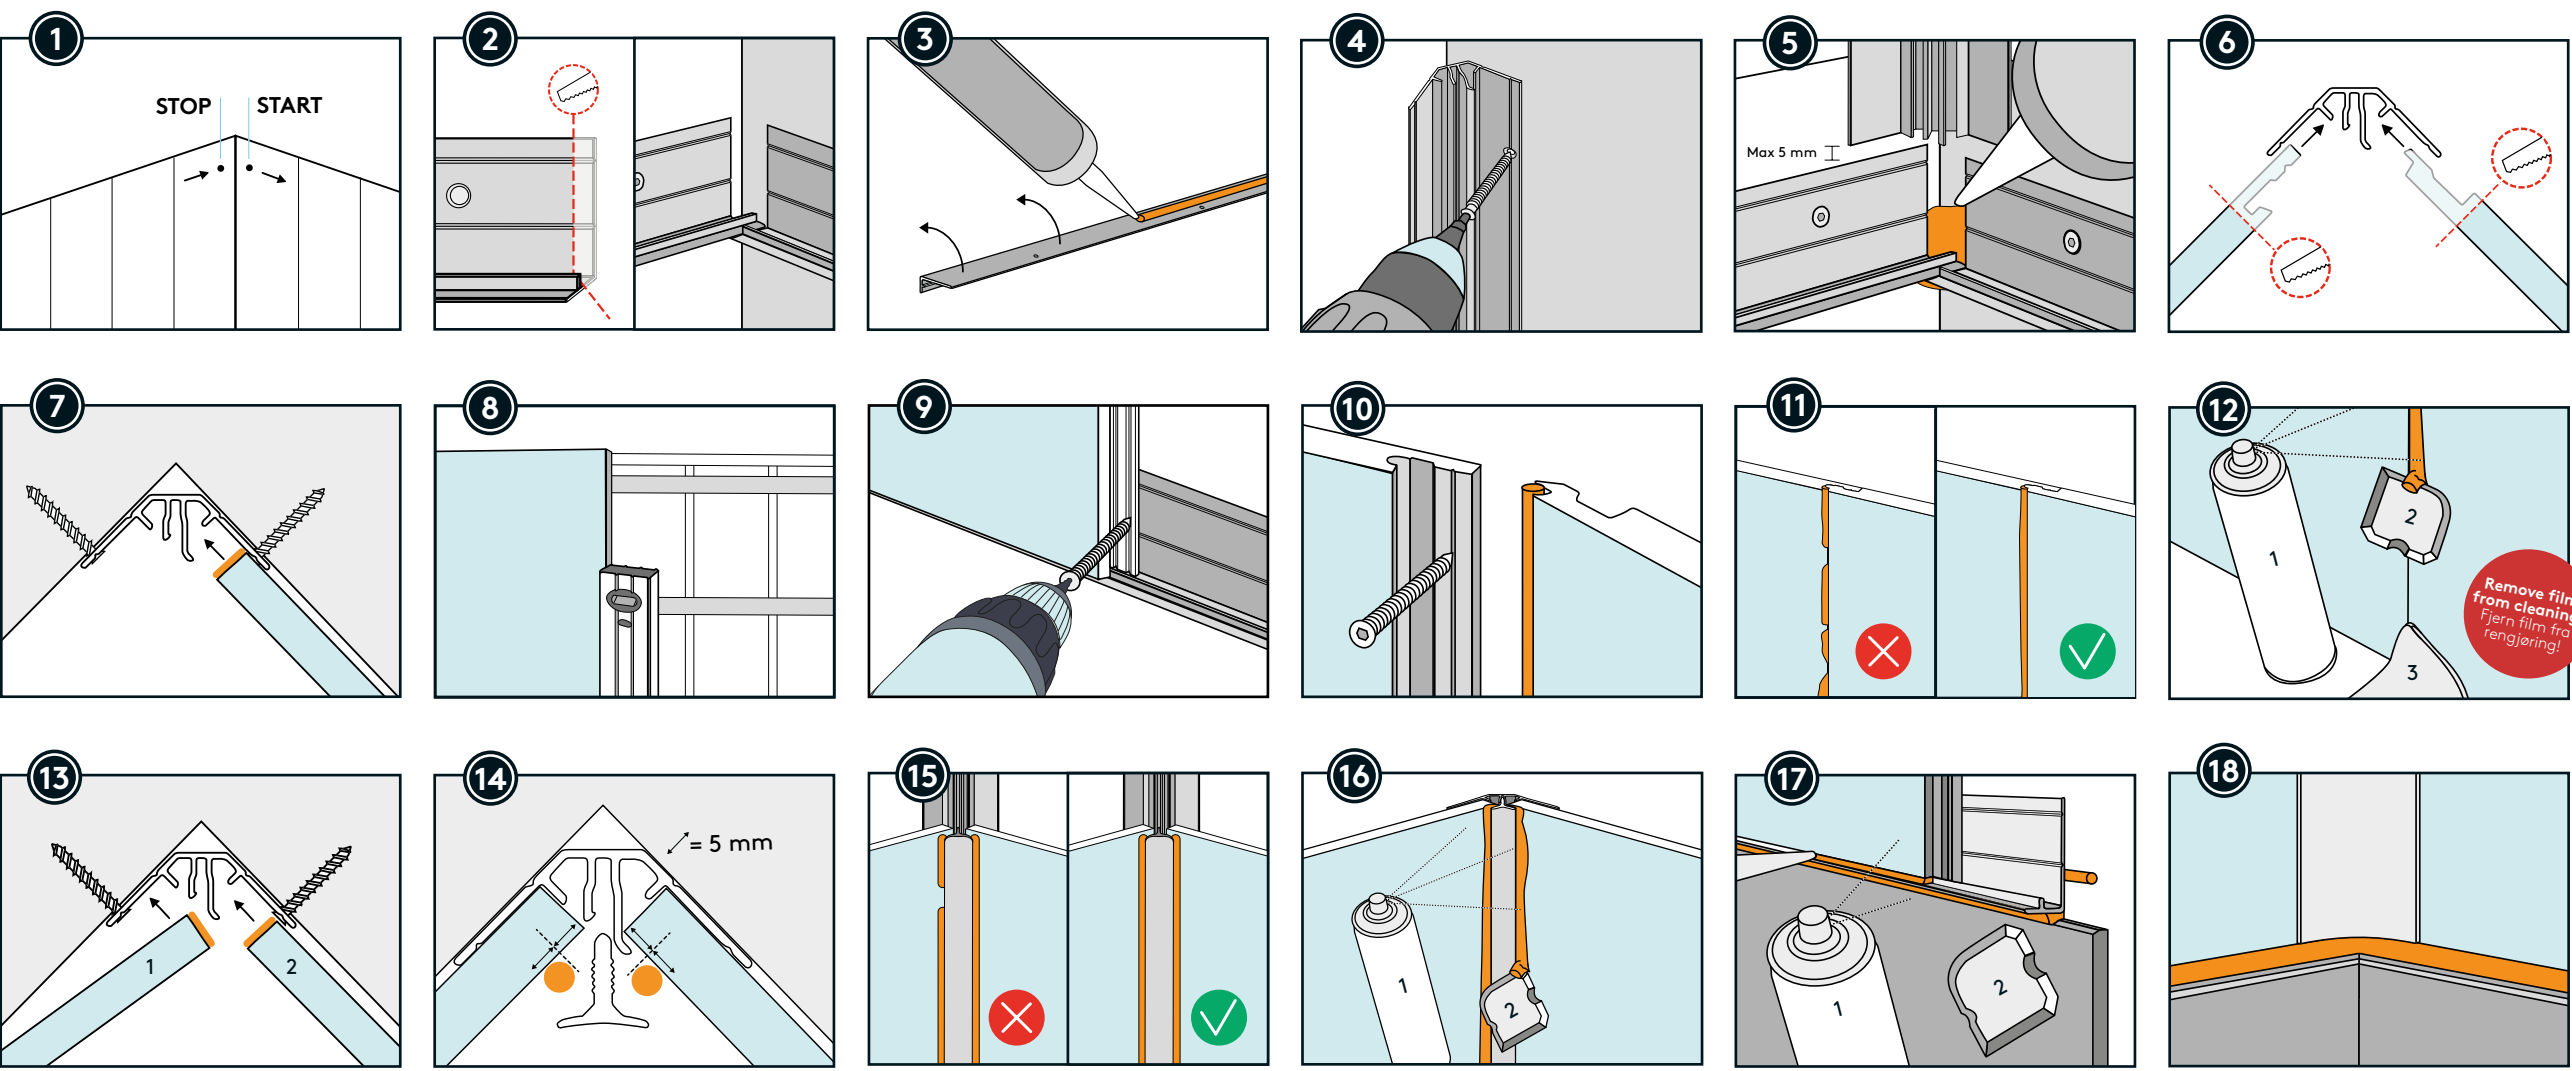

B HIDDEN INTERNAL CORNER PROFILE SKJULT HJØRNEPROFIL

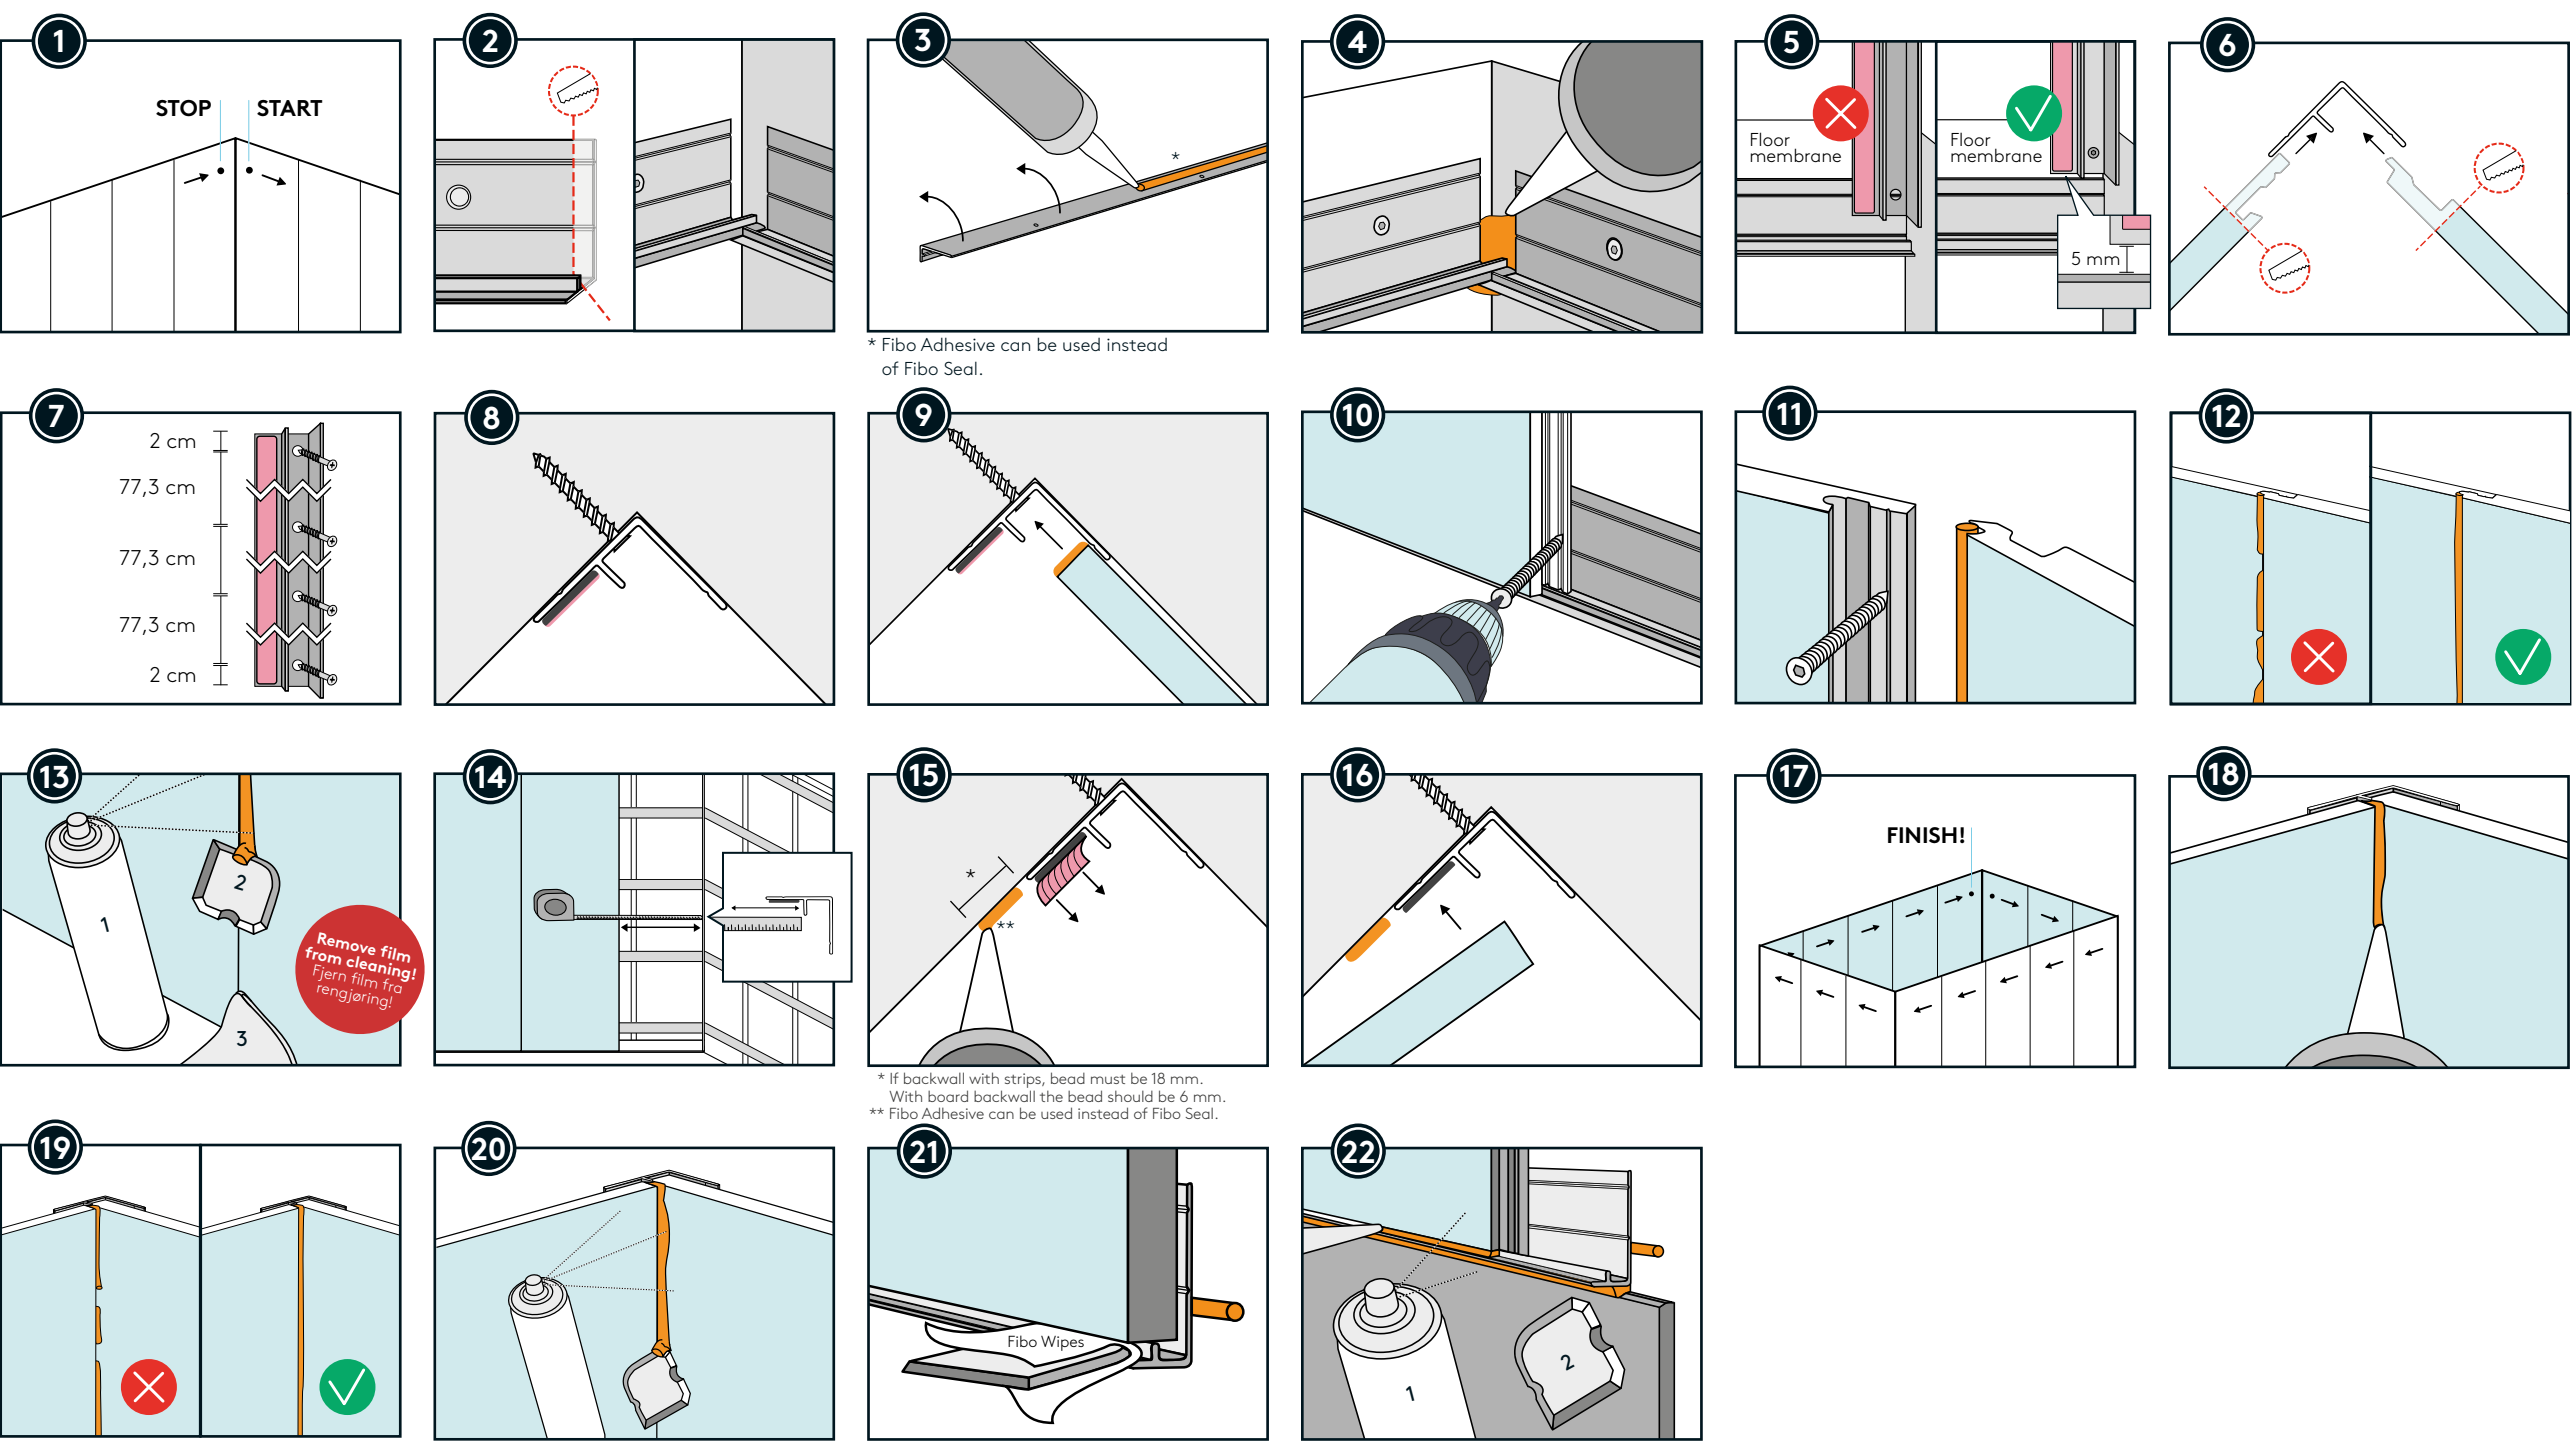

C STANDARD INTERNAL CORNER PROFILE STANDARD INNVENDIG HJØRNEPROFIL

