

Product Guide

SPECIFICATION AND INSTALLATION

- Product Warnings
- Safety Guidelines
- Kit Contents
- Required Tools
- Preparation Tips
- Installation Procedure
- Cleaning & Maintenance
- Warranty Information

Read and understand before
installing Fibo Wall panels.

Jan. 2020





Table of content

Safety Guidelines	4
General information	5
Required tools	5
Storage area	6
The Fibo System	6
Necessary materials	7
Profiles	7
Accessories	9
Installation	10
Helpful Hints	
Caulking Tips	
Backwall	
Installing Access Panels	
Dog-leg	
Sealing Faucet	
Sealing and finishing with L profile	
Installing accessories	
Details	12
Base profile - Shower tray and bathtub	12
Base profile - Whole room installation	12
Window sill in wet zone	12
Niches in wet zone	13
Disclaimer	14
Disclaimer	14
Installation Procedures	15
Overview installation methods	15
Alcove – Wide Panels	16
Alcove – Standard Wall Panels	19
Shower Corner – Wide Panels	22
Shower Corner – Standard Wall Panels	25
Cleaning	28
General information about detergents	
Good advice	
Daily/weekly cleaning	
Less frequent cleaning	
Residues of soap and skin fat	
Stain/Problem Spots	
Aluminium Profiles	
Sealant	
Maintenance	29
Replacing Sealant	
Chips and Scratches	
Aluminum Profiles	
Warranty	30
Conditions, Exclusions and Limitations	
Tests and approvals	



Safety Guidelines

If our product is properly installed and maintained, as stated in these instructions, it will not leak.

WARNING:

To avoid product damage, personal injury, or even possible death, carefully read, understand and follow all the instructions in this guide before installing the product(s). Read and understand the instructions and warning on cleaning fluids and operating tools used in this installation process. Proper use of tools and the products described in this guide is your responsibility.

WARNING: Indicates a potentially hazardous situation which, if not avoided could result in serious injury or death.

WARRANTY:

This product is covered by a Limited Lifetime Warranty for residential applications & 25 years Limited Lifetime Warranty for non-residential. Please look at the Warranty section in this manual for details.

IMPORTANT NOTICE:

Indicates that equipment or property damage can result if instructions are not followed.

CAUTION:

Indicates a potentially hazardous situation which, if not avoided, may result in injury. It may also be used to alert against unsafe practices.



WARNING: This product can expose you to chemicals including formaldehyde and acetaldehyde, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

Use proper installation Methods: Follow all instructions related to wall surface preparation. Failure to follow such instructions could cause the panels to detach from the wall surface after installation, resulting in personal injury. Failure to follow these instructions could result in water damage.

Lifting Hazard: According to the national institute for occupational safety and health, the recommended maximum safe lifting weight is 51 pounds, with all lifting conditions perfect – minimal forward reach, steady load close to the body, straight back, load between knees and shoulders, and good grips. When carrying a heavy, load get help.

Personal Protection: Be sure to use all personal protective equipment, such as sturdy work boots, preferably with steel toes, gloves, and hard hat if necessary, to ensure your own safety. To prevent possible damage to your hearing, always wear ear protection, such as earmuffs or earplugs, when working around power tools.

Sharp Edge Hazard: After cutting the edge of a Fibo panel, it can be sharp. When clicking the panels together do not place hand or finger in between as this can cause cut injury. Wear protective gloves to prevent personal injury.

Room Temperature & Air Humidity: Allow the Fibo Wall panels to adjust to room temperature and air humidity for at least 72 hours before installation, and read the Fibo Seal Technical Datasheet for proper handling and storage for the sealant. The panels should be installed at temperatures not less than 65°F and 45%RH. Panels should not be installed in areas where the temperature may drop below freezing (32°F). Failure to follow this recommendation could adversely affect the sealant function and change the dimension of the panel, causing it to warp.

Eye Protection: Be sure to use all personal protective equipment to ensure your own safety. To avoid eye injury, always wear protective glasses with side shield when using power tools. Also, make sure no one else can be injured by flying particles when using power tools.

Fire Hazard: Personal injury or death can result from a fire caused by flammable liquids. Cleaners

or solvents can be highly explosive, resulting in personal injury or even death, when not used properly. Clean up any flammable substances immediately. Sparks or open flames can cause flammable substances to ignite. DO NOT smoke while working on or near any flammable substances.

Solvent Hazard: Follow all the manufacturer's safety instructions for Fibo Seal, Fibo Adhesive, Fibo Clean and Fibo Wipes. Fibo Clean is both flammable and hazardous to breathe, it may cause dizziness so make sure to have proper ventilated room when in use. Fibo Wipes may cause dry skin with skin contact. Personal injury can result from improperly handling or use of products. Always follow the manufacturer's recommendations for the safe use of these products. Ventilate any work area before beginning to apply sealant, cleaning agents or solvents.

Dust Hazard: When cutting or drilling the Fibo product, use a dust collection method which prevents dust particles from going into the air. Always use OSHA approved dust mask when cutting, drilling, or sanding Fibo products.

Power Tool Hazard: To prevent personal injury or possible death, always follow the electrical safety recommendations for the power tool's manufacturer. Do not use power tools in an unsafe manner. Power tools should only be connected to a circuit protected by ground-fault circuit interrupter (GFI).

Shock Hazard: Never use electric power tools around water, condensation, or other liquids. Electric shock can cause severe burns, significant injuries, and even death. If an extension cord is required always use an OSHA approved extension cord. Power cords should only be connected to a circuit protected by a ground-fault circuit interrupter (GFI).

General information

Required Tools

- Fibo Seal
- Fibo Clean
- Fibo Wipes
- Fibo Screw (with bit T10)
- Fibo Profiles
- Fibo Sealing Tools
- Fibo Grip
- Hammer
- Track saw, Plunge saw or Circular saw
- Drill with T10 drill bit
- Hole saw for shower heads and pipe penetrations
- Tape measure
- Level
- Masking tape
- Caulking gun
- Clean paper towels
- Ruler and pencil



Storage area

A suitable storage area is an area

- Where the panels can be stored flat.
The panels must not be stored by standing upright on any edge.
- Where the panels can be stored in package all the way up to installation point
- Which is indoors and undercover
- Which is free of moisture
- Which is not exposed to direct sunlight or sources of direct heat

The Fibo System


Fibo offers a complete system to ensure optimal results and make the installation as easy as possible for you. Customized accessories ensure a perfect, secure result.

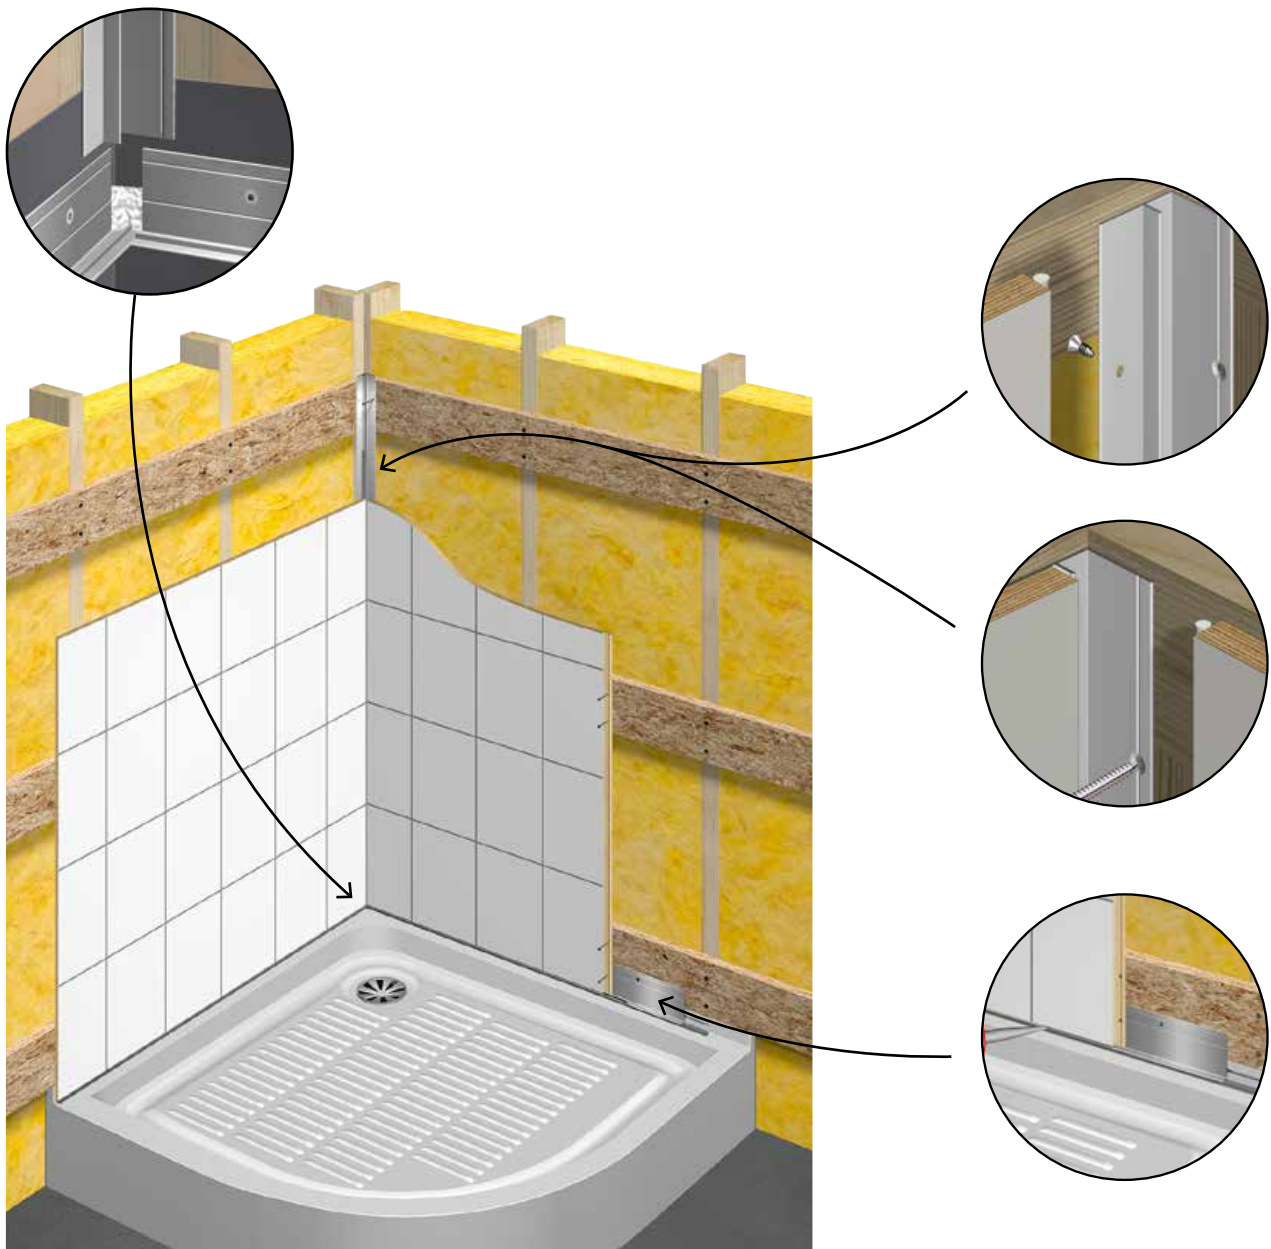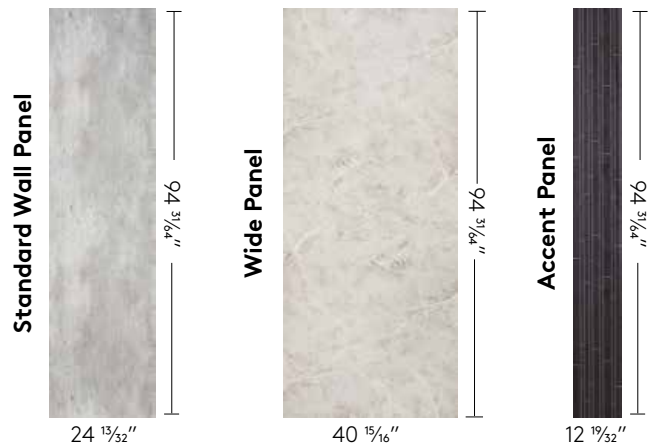

Necessary materials


The Fibo panels are easy to cut with a regular fine tooth saw. There is therefore no need for a pre-cut kit. Cut the panels to the required size at site.

See below what you need:

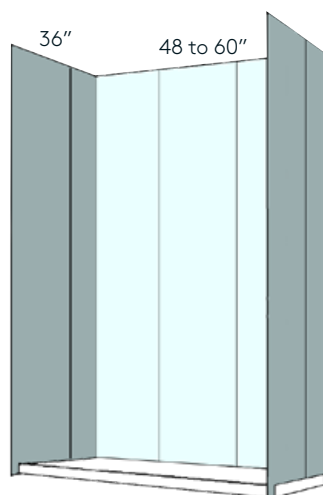


3 sided Alcove with shower base 48"-60" x 36"

Wall panels 24"/40":	6 / 4 panels
Internal corners:	2 pieces
Base/bottom profiles:	2 pieces
L-shaped profile:	2 pieces
Fibo Screws:	1 box of 200
Fibo Seal:	2 / 1 pieces
Fibo Clean:	1 can
Fibo Wipes:	1 box
Fibo Sealing Tool:	1 piece

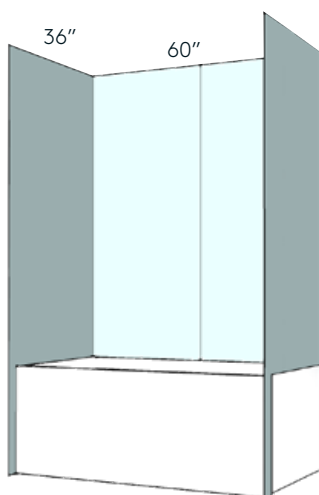

3 sided Alcove with bathtub 60" x 36"


Wall panels 24"/40":	6 / 4 panels
Internal corners:	2 pieces
Base/bottom profiles:	2 pieces
L-shaped profile:	2 pieces
Fibo Screws:	1 box of 200
Fibo Seal:	2 / 1 pieces
Fibo Clean:	1 can
Fibo Wipes:	1 box
Fibo Sealing Tool:	1 piece

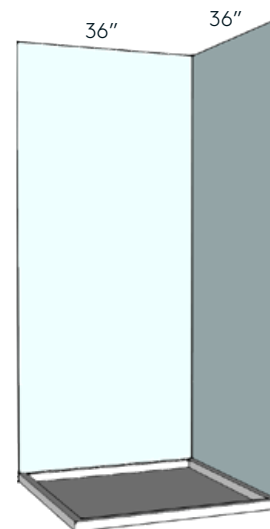


Shower corner with base 36" x 36"

Wall panels 24"/40":	4 / 2 panels
Internal corners:	1 piece
Base/bottom profiles:	1 piece
L-shaped profile:	2 pieces
Fibo Screws:	1 box of 200
Fibo Seal:	1 pieces
Fibo Clean:	1 can
Fibo Wipes:	1 can
Fibo Sealing Tool:	1 piece


Profiles



Hidden Internal Corner Profile 90°



Stacking Profile



L-Profile Wide



L-Profile Small




External Corner Profile 135°



Internal Corner Profile 135°



Combi Profile

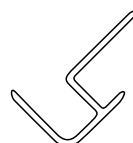

External Corner Profile 90°



Base Profile

ALU PROFILES PREDRILLED AND PRECUT PACKED INDIVIDUALLY

PRODUCT NAME	LENGTH	ART. NO	MATERIAL	COLOR	TREATMENT	IN PACKAGE
Internal corner profile II, 135° predrilled/cut	94 3/4"	163938	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
Internal corner profile II, 135° predrilled/cut	118 7/4"	163940	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
Hidden corner profile	92 29/32"	163906-E	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	9 mm screws
External corner profile II	94 3/4"	163800-E	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
External corner profile II	118 7/4"	163805	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
External corner profile II, 135° predrilled/cut	94 3/4"	163945	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
External corner profile II, 135° predrilled/cut	118 7/4"	163947	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
Base profile, predrilled	94 3/4"	163910-E	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
Base profile, predrilled (for flange)	94 3/4"	163912-E	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
L-shaped finishing profile (large)	94 3/4"	163128-E	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
L-shaped finishing profile (small)	94 3/4"	163317-E	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
L-shaped finishing profile (small)	118 7/4"	163407	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
Combi profile	94 3/4"	163901	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	
Stacking profile alu, 2-parts	94 3/4"	102283	EN AW 6060 (573-3)/ EB AW-6063 T6	Alu	Anodized	

WHITE ALU PROFILES PREDRILLED AND PRECUT PACKED INDIVIDUALLY

PRODUCT NAME	LENGTH	ART. NO	MATERIAL	COLOR	TREATMENT
Internal corner profile white II, 2-parts	94 3/4"	163929	EN AW-6063 T6	Visible part RAL 9016	Lacquered
Internal corner profile white II, 2-parts	118 7/4"	163931	EN AW-6063 T6	Visible part RAL 9016	Lacquered
External corner profile white II, predrilled/cut	94 3/4"	163908	EN AW-6063 T6	RAL9016	Lacquered
External corner profile white II, predrilled/cut	118 7/4"	163921	EN AW-6063 T6	RAL9016	Lacquered
Stacking profile white, 2-parts	94 3/4"	102284	EN AW-6063 T6	RAL9016	Lacquered
L-profile White (small)	94 3/4"	163941-E	EN AW-6063 T6	RAL9016	Lacquered
L-profile White (large)	94 3/4"	163948-E	EN AW-6063 T6	RAL9016	Lacquered

DARK ALU PROFILES PREDRILLED AND PRECUT PACKED INDIVIDUALLY

PRODUCT NAME	LENGTH	ART. NO	MATERIAL	COLOR	TREATMENT
L-profile Dark (small)	94 31/64"	163943-E	EN AW-6063 T6	RAL7016	Lacquered
L-profile Dark (large)	94 31/64"	163949-E	EN AW-6063 T6	RAL7016	Lacquered

Accessories



FIBO SEALING ACCESSORIES				
PRODUCT NAME	ART. NO	MATERIAL	SIZE	IN PACKAGE
Fibo Seal – White	400490	MS Polymer	9,8 fl oz	12
Fibo Seal – Grey	400591	MS Polymer	9,8 fl oz	12
Fibo Seal – Dark Anthracite	400593	MS Polymer	9,8 fl oz	12
Fibo Adhesive	400589	Adhesive	9,8 fl oz	12
Fibo Sealing Tools	400582			2 per packages
Fibo Tapping Tool	400584			1
Fibo Clean	400586	Aerosol Spray	13,5 fl oz	12
Fibo Wipes	400583			6 containers (35 sheets per container)



Screw name 1/8" x 25/32"
40 pcs/box Art. no. 810005
200 pcs/box Art. no. 810010



Fibo Screw 1/8" x 1 3/8"
200 pcs/box Art. no. 810006
1000 pcs/box Art. no. 810007



Fibo Screws for steel studs 5/64" x 1 49/64"
200 pcs/box Art. no. 810011

FIBO SCREWS					
PRODUCT NAME	IN PACKAGE	ART. NO	MATERIAL	BITS	TREATMENT
Fibo Screws 1/8" x 25/32"	40 pcs/box + 1 bits	810005	Steel C1022	Torx T10	Zinc plated 3-5µm
Fibo Screws 1/8" x 25/32"	200 pcs/box + 1 bits	810010	Steel C1022	Torx T10	Zinc plated 3-5µm
Fibo Screws 1/8" x 1 3/8"	200 pcs/box + 1 bits	810006	Steel C1022	Torx T10	Zinc plated 3-5µm
Fibo Screws 1/8" x 1 3/8"	1000 pcs/box + 2 bits	810007	Steel C1022	Torx T10	Zinc plated 3-5µm
Fibo Screws for steel studs 5/64" x 1 49/64"	200 pcs/box + 1 bits	810011	Steel C1022	Torx T10	Black phosphated

Installation

Recommended installation methods for Alcoves and Shower Corners are described further below. If in doubt on which one is most suitable for your application, please contact Fibo sales rep or a professional craftsman. The selection of installation method is important step before starting any installation.

For best result use Fibo Seal for sealing the Aqualock click and profiles, this product has a proper bonding to the Fibo products and shower trays and bath tubs. One tube of Fibo Seal is enough for approximately 65.61 running feet. As a general rule, one tube of Fibo Seal is enough for three packs of panels. As a general rule, you will need one package of screws for five packs of panels.

Ensure that you have all the correct products, accessories and tools for the installation as referred to in sections Necessary materials, Required Tools and Parts. The products must be checked visually for errors before installing. Note, that not doing so could void your warranty.

Helpful hints

Ensure construction is correctly sized, plumb and square.



Allow enough time for the parts in this kit to adjust to room temperature. Recommended minimum time is set to 72 hours. We do not recommend installation of this product at temperatures below 65°F and below 40% RH.

Do not use stored Fibo panels as underlayer for cutting other Fibo panels. Make sure to have other proper underlayer available.


Caulking Tips

Follow the instructions of the Fibo Seal Technical Datasheet (TDS) when applying the sealant and for suitable usage areas. Use Fibo cleaning accessories and Sealing Tool to make the sealing job easier. When a job is complete, inspect all caulked areas for gaps and fill as needed. In the Aqualock click the sealant excess should be visible from top to bottom of panel, inspect for gaps and fill as needed.

Clean up any excess sealant with Sealing Tool, Fibo Clean and Fibo Wipes. The sealant tool can be wiped dry with paper towels to remove and dispose of larger amount of sealant left on the Sealing Tool. Be careful not to disturb caulk joints.


Curing time of sealant will vary with room temperature and humidity, please see Technical Datasheet for more info.

Backwall



OSB boards

Min. 7,87" between each screw.

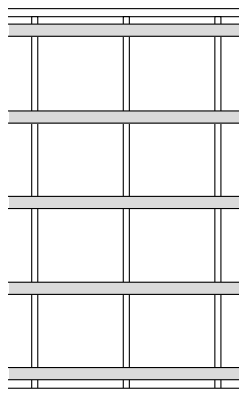

OSB strips

Min. distance between strips 20" - 2 screws per strip.

Fibo panels can be installed over a variety of products. This section describes installation of Fibo panels over OSB strips or OSB boards. Recommended minimum thickness is 1/2". It is not recommended to install Fibo on existing membrane, as Fibo panels when installed with sealant is the waterproof membrane itself. It is not necessary to install Fibo on Sheetrock, Greenboard, Cement board etc. If you install the OSB (boards or strips) over sheetrock, greenboard etc make sure the OSB is properly fixed to the studs. If you intend to apply the panels to any surface other than those described consult with a professional contractor.



Make sure the backwall is level and the corners are straight 90°. For uneven walls we recommend using OSB Strips and if necessary extra shims to even out.

Installing access panel

If using an access panel (size 12 1/32") be sure that the two panels next to it is divided equally. Repeat the sealing process. When the panels are clicked together remove excess with Fibo Clean, Fibo Sealing Tools and Fibo Wipes.




Dog-leg

As an option you can attach a loose dog-leg by gluing it to the wall.

Sealing faucet


Make sure the temperature control valve for the shower goes through the thickness of the backwall and the Fibo Panel, and that it is enough space to install the rest of the shower components. Apply sealant in front of the panel at the contact point for the decorative ring and attach the ring. For the pipe hole fitting of the shower head, the distance between the panel and pipe must be sealed and the space between the decorative ring to the laminate surface. See instructions from producer of shower system for proper installation, warnings and caution sentences.

The exposed panel edges from the hole saw cut for the control valve must be covered with sealant to uphold watertight integrity.

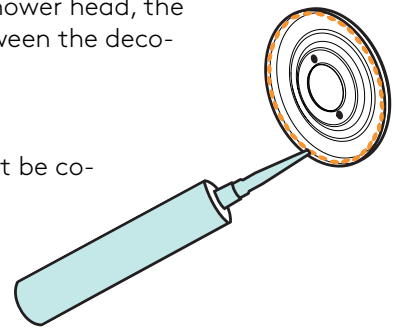

Sealing and finishing with L profile


Adjust the L-shaped finishing profile to the correct height. Apply sealant inside the profile and attach it to the edge of the panel to cover the cut edge and the visible screws.

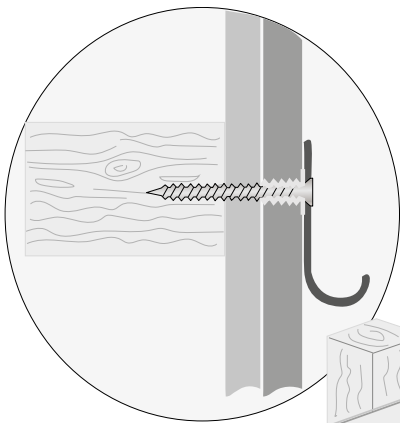

Installing accessories

Put a mark where the accessories should be placed. Pre-drill holes. Important: Not all the way through the panel, just 0,2 inches. Fill the hole with Fibo Seal. Fill the hole with Fibo Seal, attach the accessories and fasten it to the wall in the pre-drilled holes.


Note: Heavier equipment should be installed with HVAC screws.

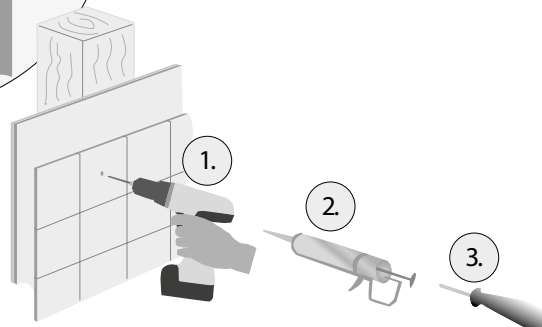

Details


Base profile - Shower tray and bathtub

Applicable for bath tub and shower tray with flange.

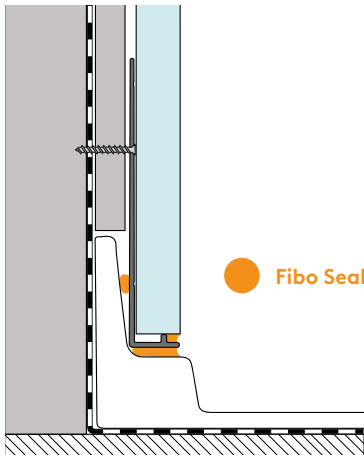


Base profile - Whole Room installation

Please also know if continuing with wall panels in the whole room, then it is recommended to use base profile also outside the bath or shower tray as a transition from wall to floor. Please see figure.

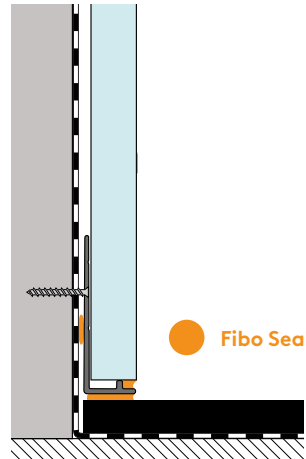

Window sill in wet zone

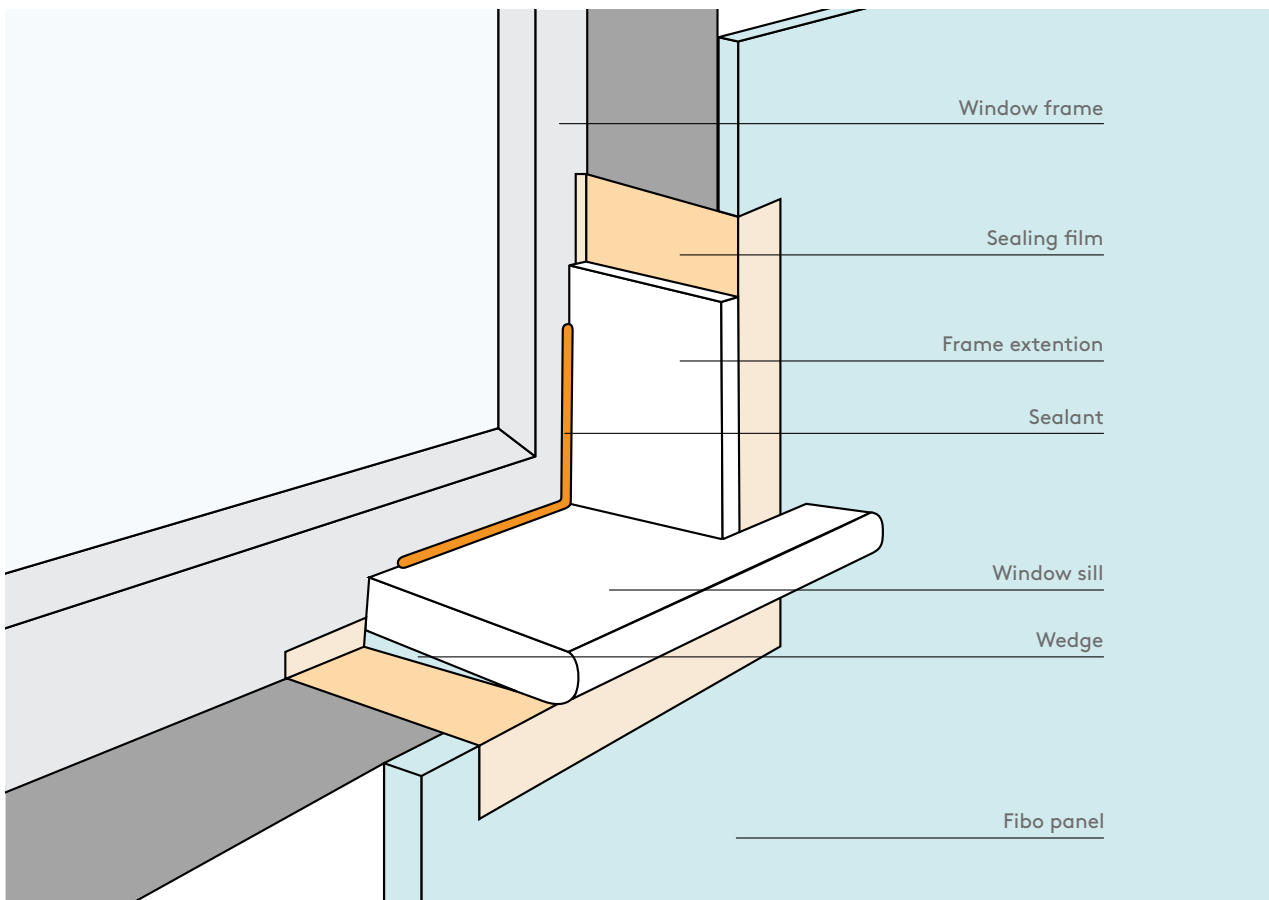

Niches in wet zone

Measure the niche, make cut marks on the panel, and cut it.
Make sure to use sealant on the cut edges, and on the surface edge to attach the niche.



Disclaimer

The information contained in this Installation Manual is given free of charge. It is based upon technical data which we believe to be reliable and is intended for use, by persons having knowledge of this technical area, at their own discretion and risk. Fibo assumes no responsibility for results obtained or damaged incurred from the use of this material either in whole or in part by the buyer.

If you have an installation application that is not covered in this manual, please contact a professional or a Fibo distributor. It is also important to read the instructions in the panel packages. For installation videos please see www.fibosystemusa.com.

Follow all installation instructions. Failure to follow these instructions could result in personal injuries, water damage, or other damage to floors, pipes, walls or other portions of your building or home.

Please use checklist to ensure that all important steps are done correctly.

Checkpoints		YES	NO	Deviation/Comment
Preliminary work	The panels were acclimatized before installation - 72 hours in the same room, with plastic wrapping intact			
	Studs and horizontal strips are correct installed - 20" between horizontal strips			
Execution	Base profile is correct installed - Applied sealant behind the base profile - A 1/8" gap between tub/floor and base profile			
	Sealant in base profile - Sufficient sealant applied in base profile - Sufficient sealant applied below base profile			
	Corner Profile is correct installed - Corner profile screwed to the back of panel and to the studs			
	Sealant in base profile and Aqualock (click) - Used approved Fibo sealant for profiles and Aqualock?			
	Correct screwing - Corrects Screws used? - Fixed with 2 screws pr. horizontal strips and 1 screw in base profile			
	Approved sealant used on cutting surfaces - Fibo Seal White/Grey/Dark Anthracite			
	Clearance between top of panel and ceiling - Allow minimum a 1/4" gap			
	Clearance around pipes - Allow a 1/4" gap			
	Support for shower doors, WC for disable, mirrors, fittings - Approved to any suppliers specification?			
Final treatment	Clean Panels - Have they used Fibo Cleaner, Fibo Wipes for cleaning of panels?			

The intention of the summary is to simply assist you in using our products in identifying some areas where we believe your satisfaction with our products can be improved. In no way does this constitute certification of or approval that your inventory or installation practices comply with any applicable laws, codes, or regulations. It remains your responsibility to ensure that your homes, as constructed, comply with all applicable laws, regulations and standards and do not pose as an unreasonable risk of harm.

Installation Procedures


Overview installation methods

Select wanted décor and what size that panel is available in. The width of the panel will and the pattern will determine what installation procedure to follow. If in doubt what installation procedure you should select, please contact a Fibo distributor.

For decors such as Crescendo collection or 9 and 10 foot long panels, the installation procedure for standard wall panels are recommended.




Alcove - Wide Panels

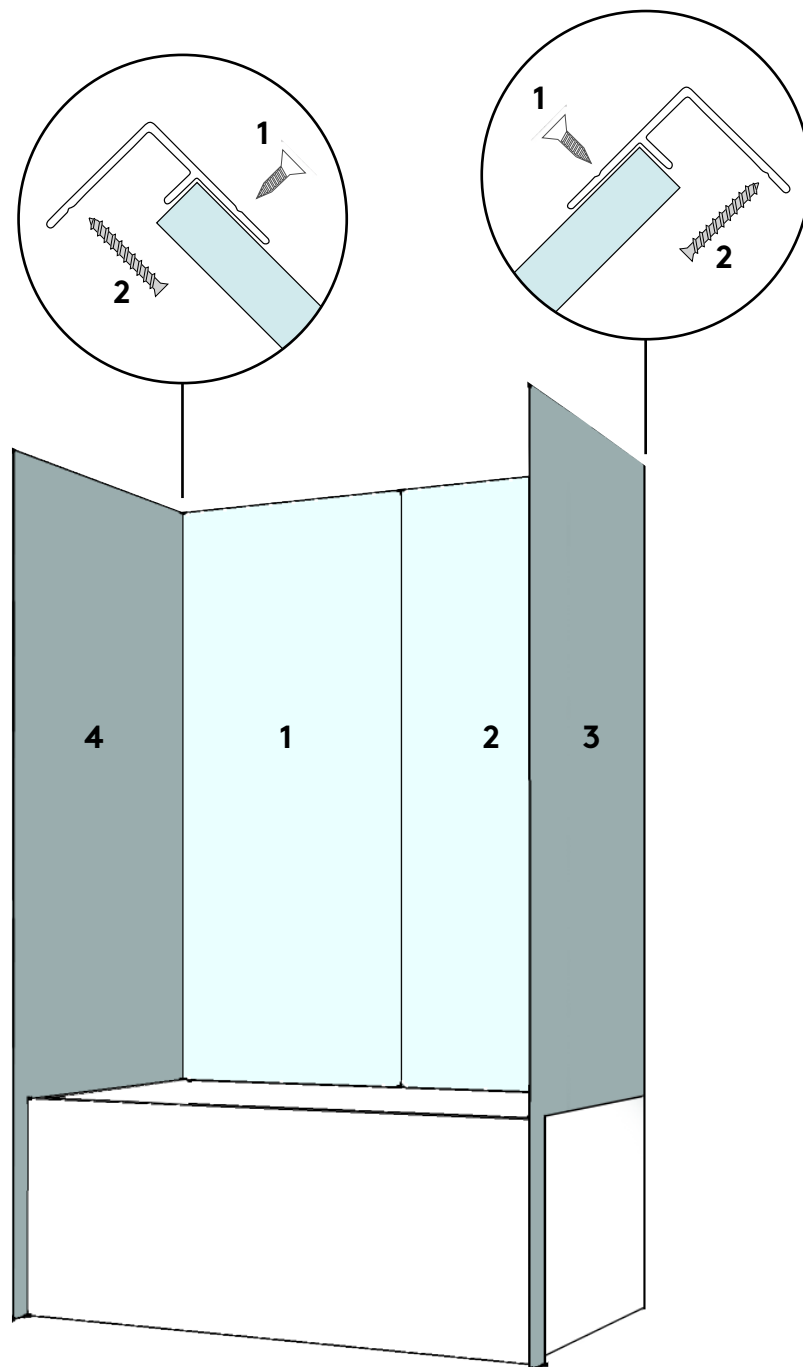




1. Measure, cut and install base profile

Measure the length needed and cut the profile. Put sealant behind the profile. Screw the profile to the wall, we recommend a gap of 1/8 inch between the tray/tub and the base profile

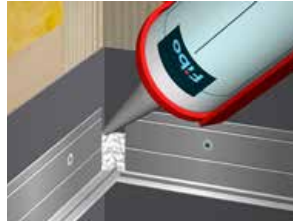



2. Installing first panel

Make sure the wall is plum. Clean the edges and apply sealant on all cut surfaces. Flip the internal corner profile as shown in the illustration above. Fasten it to the panel using the screws enclosed in the packaging. Screw the panel to the back wall and fasten the corner profile to the wall with screws in the pre-drilled holes.

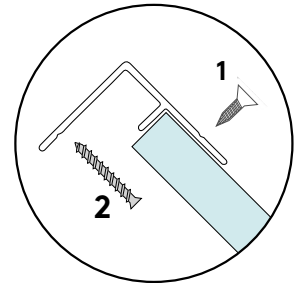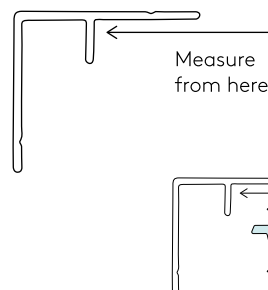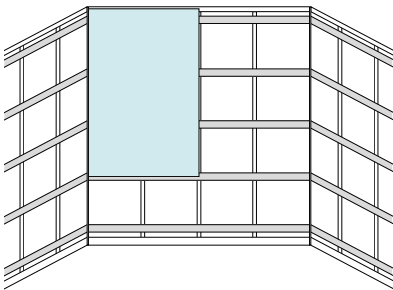

3. Second panel

Measure the panel all the way from the edge of the laminate to the bottom of the internal corner profile and cut to correct size. All cut surfaces must be cleaned with Fibo Wipes and sealed with Fibo Seal. Fasten the corner profile to the wall with screws in the pre-drilled holes. Apply Fibo Seal in the lip of the Aqualock. When the panels are clicked together remove excess with Fibo Clean, Fibo Sealing Tool and Fibo Wipes.

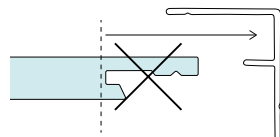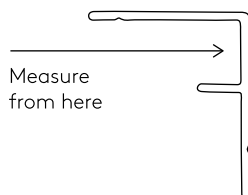

4. Installing wide panel on the first return wall

Measure the panel all the way from the edge of the laminate to the bottom of the internal corner profile and cut to correct size. Put the panel in place (remember the sealing process on all cut edges). Pre-drill holes on the exposed edge of the panel, and fasten the panel.

5. Installing wide panel on the second return wall

Measure the panel all the way from the edge of the laminate to the bottom of the internal corner profile and cut to correct size. Repeat the sealing process on all cut edges. Pre-drill holes on the exposed edge of the panel, and fasten the panel.


6. Sealing the base profile

Clean the base profile with Fibo Wipes, apply sealant between the bottom of the panel and the baseprofile, remove excess with Fibo Clean and Fibo Sealing Tool. Apply sealant between the tub/tray and the baseprofile, remove excess with Fibo Clean and Fibo Sealing Tool. Apply sealant on the side of the tub and repeat the cleaning steps.



7. Sealing the internal corner

Clean the corner with Fibo Wipes. Apply Fibo Seal in the corner. Remove excess with Fibo Clean and Fibo Sealing Tool.

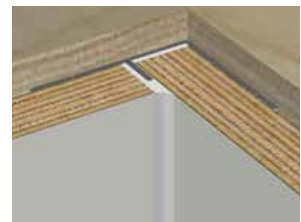


8. Finishing with L-profile

Adjust the L-shaped finishing profile to the correct height. Apply sealant inside the profile and attach it to the edge of the panel to cover the cut edge and the visible screws.




WARNING: Fumes Hazard: The fumes from the Fibo Clean used by the installer can be harmful if used in an unventilated room. Always work in a well-ventilated area. To keep the area well-ventilated, open windows and use exhaust fans. If adequate ventilation is not achievable or practical, use respiratory protective equipment

Alcove - Standard Wall Panels

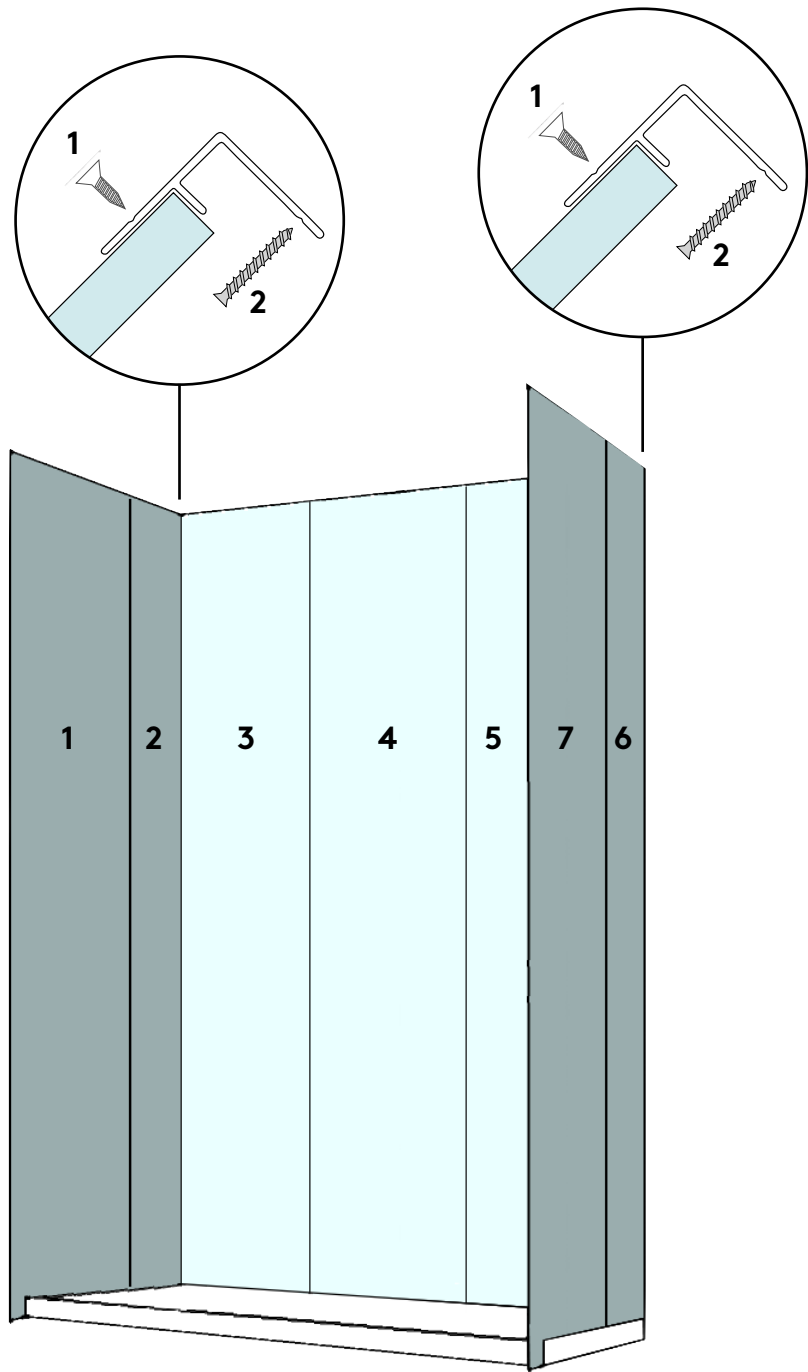


1. Measure, cut and install base profile

Measure the length needed and cut the profile. Put sealant behind the profile. Screw the profile to the wall. We recommend a gap of 1/8 inch between the tray/tub and the base profile.

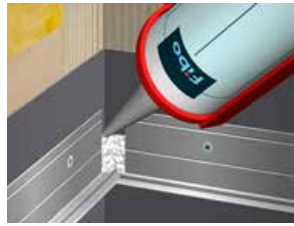

2. Installing first panel

Make sure the wall is plum, and always start the installation from left to right when using 24 inch wide panels. Measure to correct size and cut the first panel. Important: if tile pattern; we recommend to divide panel equally (uniform). Clean the edges and apply sealant on all cut surfaces that will not be covered with an L-profile. Make sure the panel is plum. Screw the panel to the back wall in the screw-lip. Remember the bottom screw should penetrate the base profile.

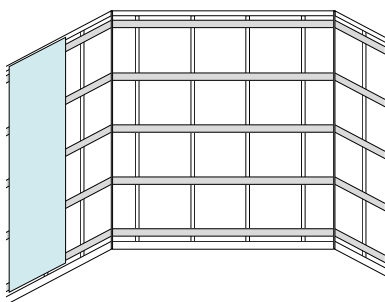


Apply sealant in lip





3. Installing the second panel and sealing the Aqualock click

Measure the panel all the way from the edge of the laminate to the internal corner profile as shown below, and cut to size needed. Make sure to apply sealant on the cut edges before installing the panel. Install the internal corner to the panel using the screws enclosed in the packaging. Apply sealant in the sealing "lip". when the panels are clicked together remove excess with Fibo Clean, Fibo Sealing Tool and Fibo Wipes.

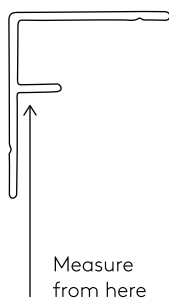


Measure
from here

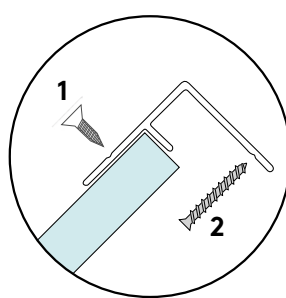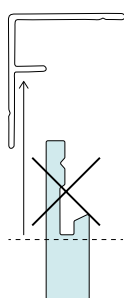


4. Installing the first panel on the back wall

Measure the panel all the way from the edge of the laminate to the bottom of the internal corner profile and cut to size needed. Screw the panel to the back wall in the Aqualock lip. Repeat the sealing process of the Aqualock.

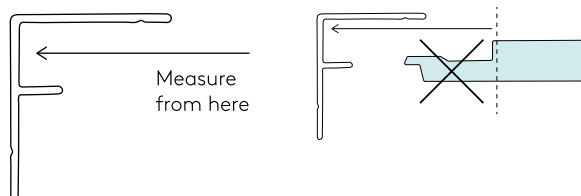

6. The last return wall

Measure the panel all the way from the edge of the laminate to the bottom of the internal corner profile and cut to size needed. Repeat the sealing process. Screw the last panel on the edge which will be covered with an L-shaped finishing profile. We recommend pre-drilling holes to get the best result.

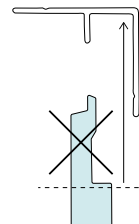

7. Sealing the base profile

Clean the base profile with Fibo Wipes, apply sealant between the bottom of the panel and the base profile, remove excess with Fibo Clean and Fibo Sealing Tool. Apply sealant between the tub/tray and the base profile, remove excess with Fibo Clean and Fibo Sealing Tool.



8. Sealing the internal corner

Clean the corner with Fibo Wipes. Apply Fibo Seal in the corner. Remove excess with Fibo Clean and Fibo Sealing Tool.




9. Finishing with L-profile

Adjust the L-shaped finishing profile to the correct height. Apply sealant inside the profile and attach it to the edge of the panel to cover the cut edge and the visible screws.



WARNING: Fumes Hazard: The fumes from the Fibo Clean used by the installer can be harmful if used in an unventilated room. Always work in a well-ventilated area. To keep the area well-ventilated, open windows and use exhaust fans. If adequate ventilation is not achievable or practical, use respiratory protective equipment

Shower Corner - Wide Panels

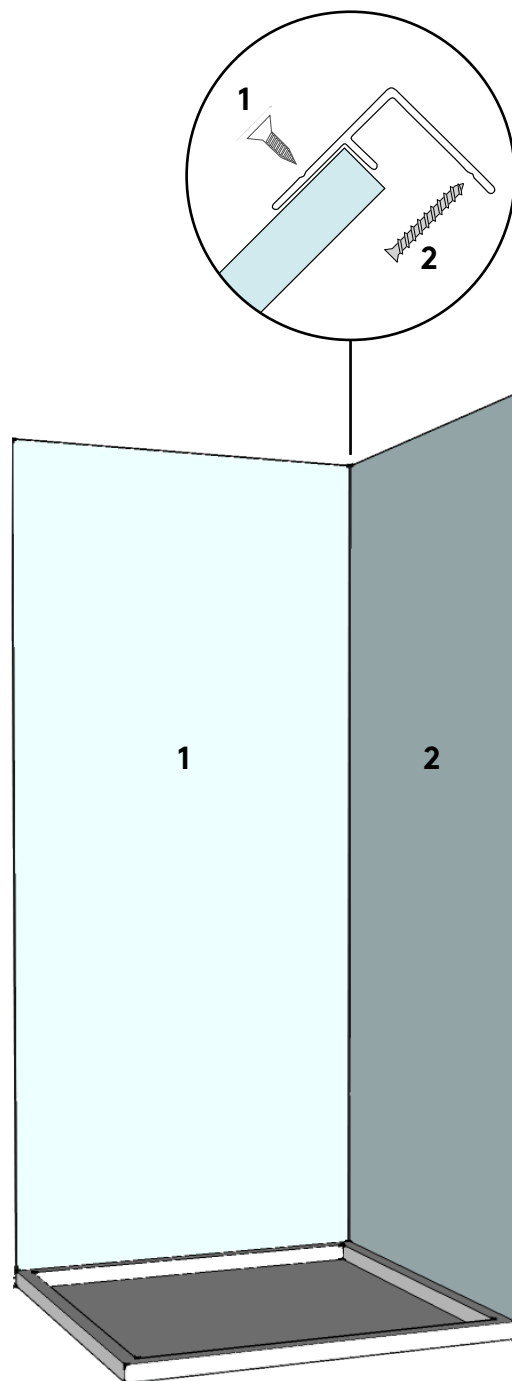





1. Measure, cut and install base profile

Measure the length needed and cut the profile. Put sealant behind the profile. Screw the profile to the wall. We recommend a gap of 1/8 inch between the tray/tub and the base profile.



2. Installing first panel



Make sure the wall is plum. Measure the panel all the way from the edge of the laminate to the top of the internal corner profile and cut to size needed. Clean the edges and apply sealant on all cut surfaces. Fasten the corner profile to the back of the panel using the screws enclosed in the packaging. Predrill holes on the left edge of the panel and fasten it to the back wall. The screw will later be hidden with L-profiles. Next screw the profile to the back wall.

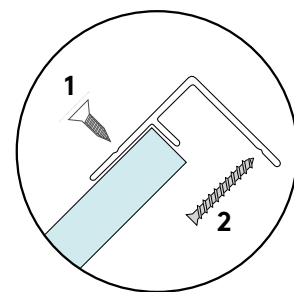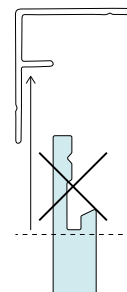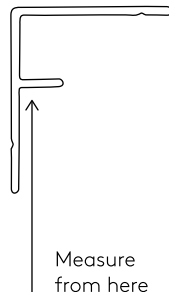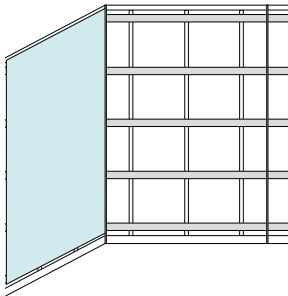

3. Installing second panel

Make sure the wall is plum and cut panel to size needed. Clean the edges and apply sealant on all cut surfaces. Install the internal corner to the panel using the screws enclosed in the packaging. Make sure the panel is plum, and screw the panel on the edge to the back wall (we recommend pre-drilling holes for the best result). Fasten the corner profile with screws through the pre-drilled holes.

Measure to size. Be sure to measure all the way into the bottom of the internal profile. Cut the panel. Repeat the sealing process. Push the panel in place. Make sure the panel is plum, and screw the panel on the edge to the back wall (we recommend pre-drilling holes for the best result).

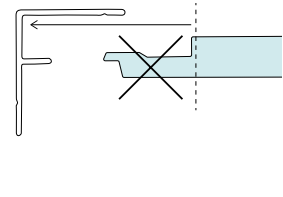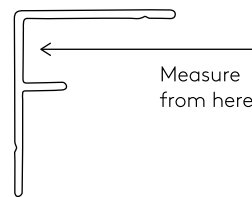




4. Sealing the base profile

Clean the base profile with Fibo Wipes, apply sealant between the bottom of the panel and the base profile, remove excess with Fibo Clean and Fibo Sealing Tool. Apply sealant between the tub/tray and the base profile, remove excess with Fibo Clean and Fibo Sealing Tools.



5. Sealing the internal corner

Clean the corner with Fibo Wipes. Apply Fibo Seal in the corner. Remove excess with Fibo Clean and Fibo Sealing Tool.

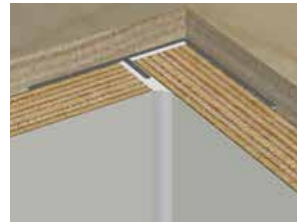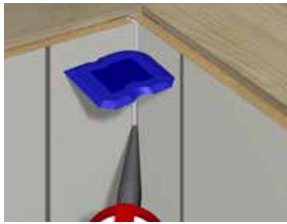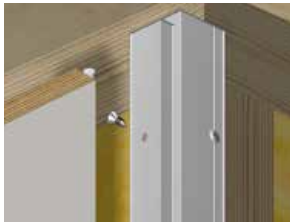

6. Installing the L-shaped finishing profile

Apply sealant in front of the panel at the contact point for the decorative ring and attach the ring. Adjust the L-shaped finishing profile to the correct height. Apply sealant inside the profile and attach it to the edge of the panel to cover the cut edge and the visible screws.


7. Installing accessories

Put a mark where the accessories should be placed. Pre-drill holes. Important: Not all the way through the panel, just 0,2 inches. Fill the hole with Fibo Seal. Fill the hole with Fibo Seal, attach the accessories and fasten it to the wall in the pre-drilled holes. (Note: Heavier equipment should be installed with HVAC screws).



WARNING: Fumes Hazard: The fumes from the Fibo Clean used by the installer can be harmful if used in an unventilated room. Always work in a well-ventilated area. To keep the area well-ventilated, open windows and use exhaust fans. If adequate ventilation is not achievable or practical, use respiratory protective equipment

Shower Corner - Standard Wall Panels

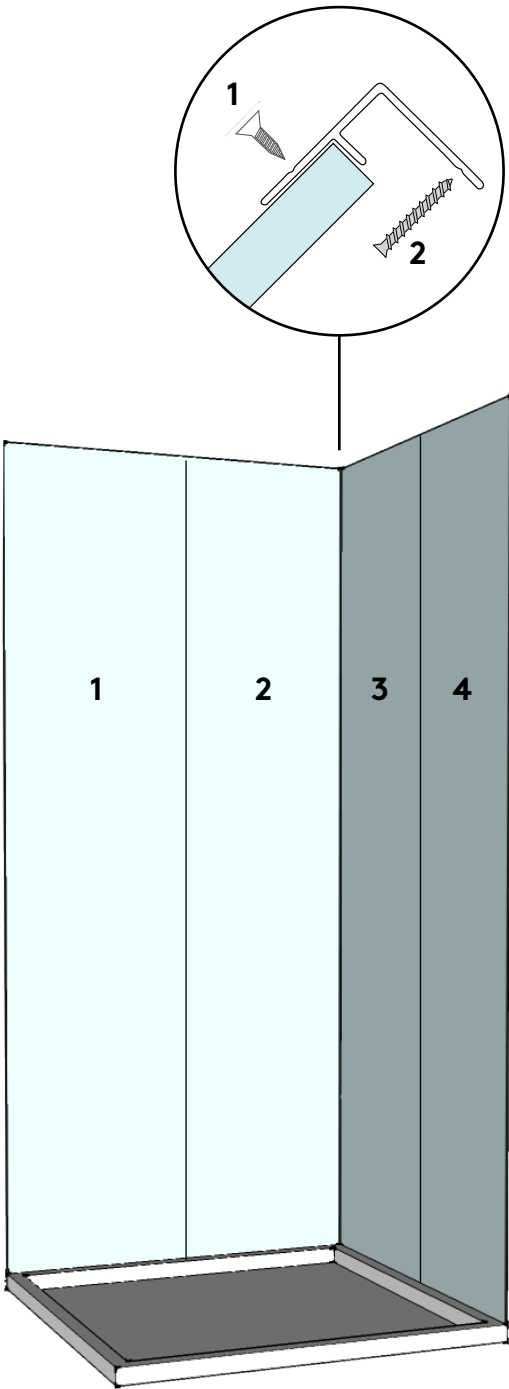


1. Measure, cut and install base profile

Measure the length needed and cut the profile. Put sealant behind the profile. Screw the profile to the wall. We recommend a gap of 1/8 inch between the tray/tub and the base profile.



2. Installing first panel

Make sure the wall is plumb and cut panel to size needed. If the panel is only around the shower corner and not the whole room, make a straight cut on the left end of the first panel. This will be covered with an L profile in the end. Clean the edges and apply sealant on all cut surfaces.

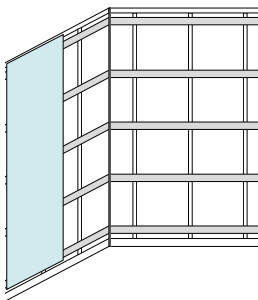


Apply sealant in lip





3. Installing the second panel and sealing the Aqualock click

Measure the panel all the way from the edge of the laminate to the bottom of the internal corner profile and cut to size needed. Make sure to apply sealant on the cut edges before installing the panel. Install the internal corner to the panel using the screws enclosed in the packaging. Apply sealant in the sealing "lip". when the panels are clicked together remove excess with Fibo Clean, Fibo Sealing Tool and Fibo Wipes.

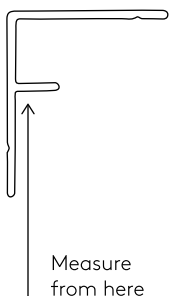


Measure
from here

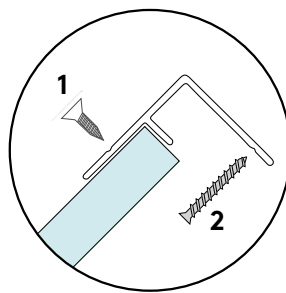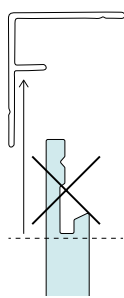

4. Installing the first panel on the back wall

Measure the panel all the way from the edge of the laminate to the bottom of the internal corner profile and cut to size needed. Screw the panel to the back wall in the Aqualock lip. Repeat the sealing process of the Aqualock.

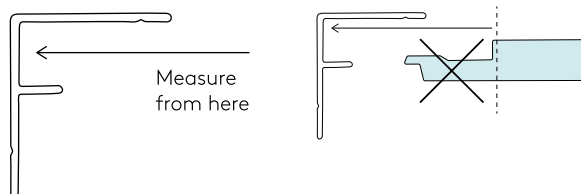

5. Sealing the base profile

Clean the base profile with Fibo Wipes, apply sealant between the bottom of the panel and the baseprofile, remove excess with Fibo Clean and Fibo Sealing Tool. Apply sealant between the tub/tray and the baseprofile, remove excess with Fibo Clean and Fibo Sealing Tools.



6. Sealing the internal corner

Clean the corner with Fibo Wipes. Apply Fibo Seal in the corner. Remove excess with Fibo Clean and Fibo Sealing Tool.



7. Installing the L-shaped finishing profile

Apply sealant in front of the panel at the contact point for the decorative ring and attach the ring. Adjust the L-shaped finishing profile to the correct height. Apply sealant inside the profile and attach it to the edge of the panel to cover the cut edge and the visible screws.

8. Installing accessories

Put a mark where the accessories should be placed. Pre-drill holes. Important: Not all the way through the panel, just 0,2 inches. Fill the hole with Fibo Seal. Fill the hole with Fibo Seal, attach the accessory and fasten it to the wall in the pre-drilled holes. (Note: Heavier equipment should be installed with HVAC screws).



WARNING: Fumes Hazard: The fumes from the Fibo Clean used by the installer can be harmful if used in an unventilated room. Always work in a well-ventilated area. To keep the area well-ventilated, open windows and use exhaust fans. If adequate ventilation is not achievable or practical, use respiratory protective equipment.

Installation instruction

Gluing standard Wall Panels

Panel size: 94 $\frac{31}{64}$ x 24 $\frac{13}{32}$ / 2400 x 620 mm

Gluing on tiles and plasterboard.



Mechanical strenght:



Only hang light weight equipment on the Fibo panels glued over tile or plasterboard wall. Do not hang handrails, bathroom furniture or similar without making appropriate support and fixing behind the Fibo panels. Fibo is not responsible for the instructions on how to reinforce the backwall for this. This is the responsibility of the installer and to follow the recommendation for the suppliers of the accessories.

Preparation:

- Tiles with high gloss finish will have to be rubbed/sanded to give a good "grip"
- Tiles will always have to be cleaned for any dust, soap etc before gluing
- If there is tiles only on part of the wall, battens must be installed on the rest of the wall to compensate for tile thickness
- The installer is responsible for checking or giving instructions on how to inspect the condition of new or existing plasterboard or tile wall. If any damage is a result of failure in the existing wall Fibo warranty is not valid.


Amount of adhesive

- The amount of adhesive depends upon how straight the back wall is. In general 1 tube of adhesive per 2 panels in size 2x8 ft. More if the backwall is uneven.




Fibo Seal in combination with screws, or glue with initial grab. Make sure to screw the first panel as shown. Follow the instructions from the adhesive supplier on how to prepare and apply adhesive. It may differ how quick it grabs.


Make sure to check with the supplier of the adhesive that it is fit for your purpose. Choice of adhesive is the installers responsibility.

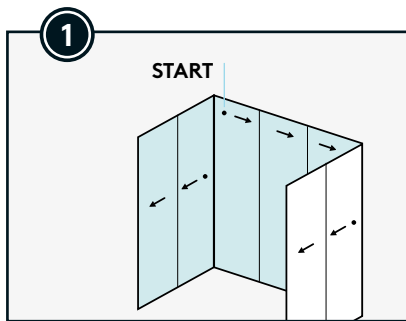


Assembly order

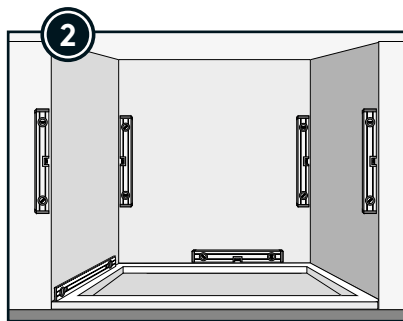


Make sure walls and base are plum/level

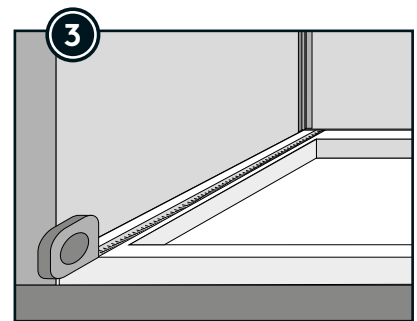


Measure for length of base profile

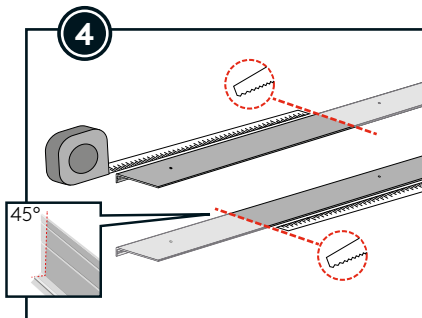


Cut to length and mitre corner 45°

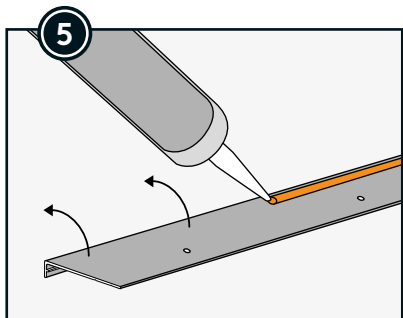


Apply Fibo seal on the back of the base profile

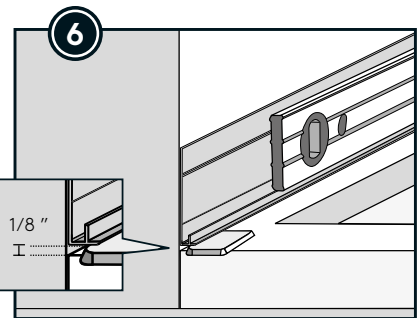


Shim 1/8 inch between tub and base profile.

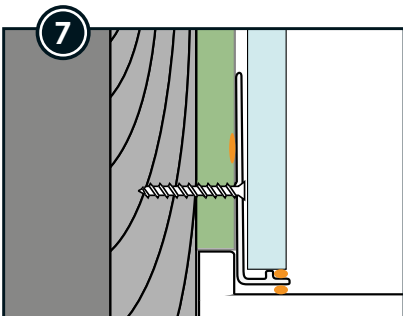


Attach base profile to the studs

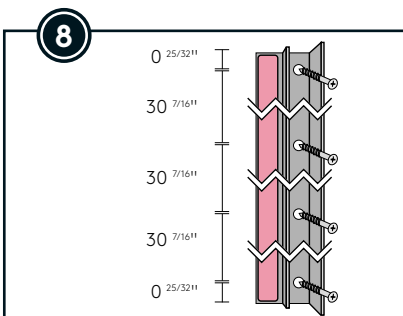


Hidden corner profile, screw pattern

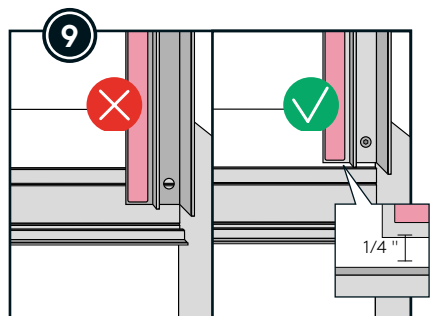


Leave 1/4 inch gap between corner profile and base profile

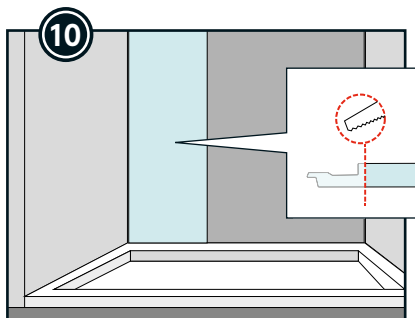


Clean cut panel no. 1 (left side)

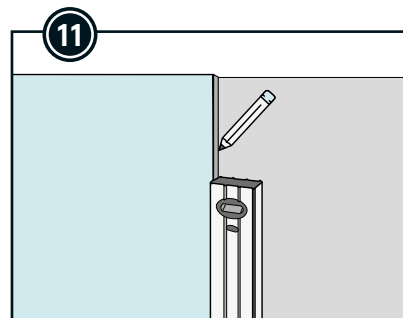


Dryfit panel, make sure it is plum and draw a line

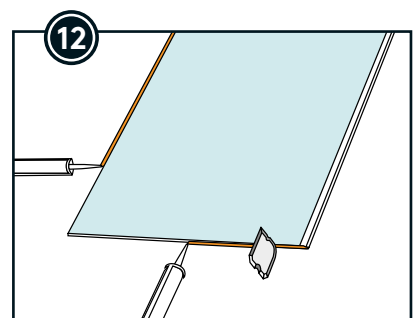


Apply Fibo Seal on cut surfaces

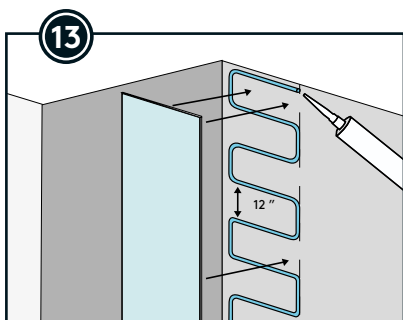


Gluing pattern on wall panel no. 1

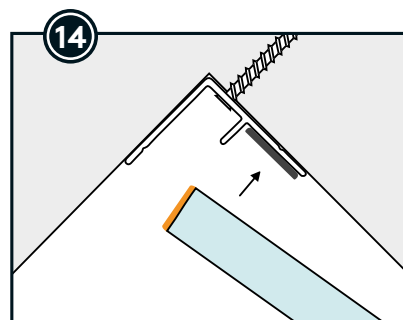


Tear of protection tape and install panel

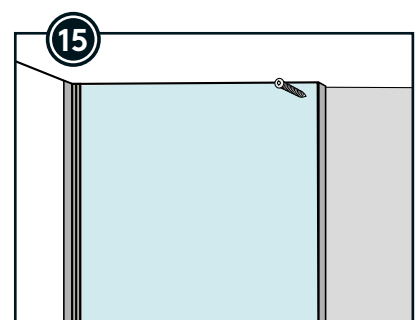


Countersink and attach with screw 1/4 inch from the top and into the stud. The screw will be hidden with L-profile

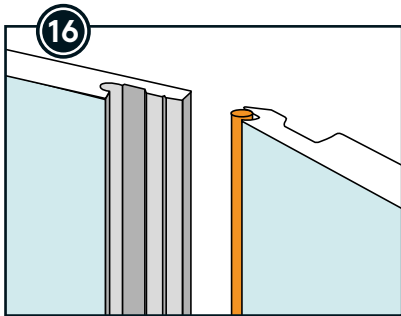


Next panel: Apply Fibo Seal in the Aqualock click

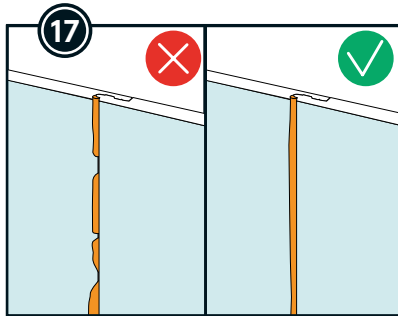


Make sure that there is enough sealant coming out of the click when put together

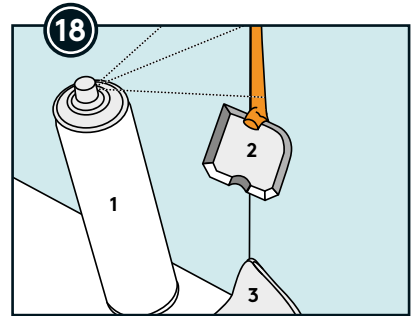


1. Spray with Fibo Clean
2. Remove with Fibo Sealing Tool
3. Finish with Fibo Wipes

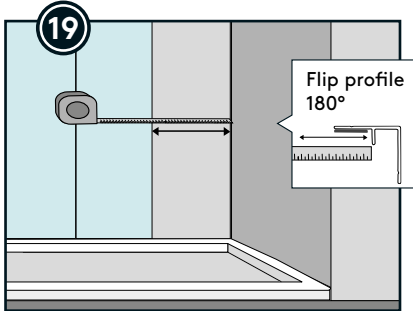


Flip the corner profile, measure and cut panel. Dry fit before applying glue and Fibo Seal.

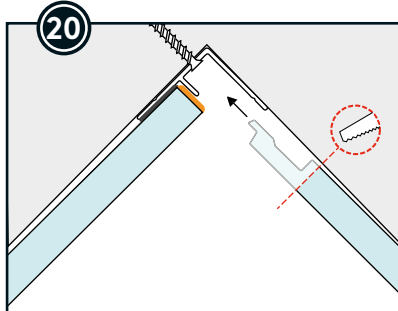


Measure and cut first panel on return wall

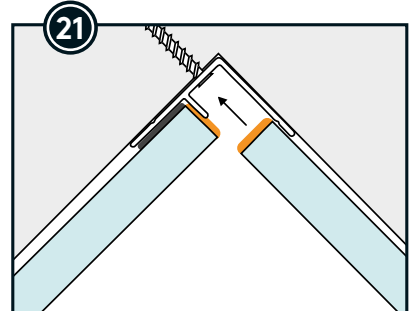


Apply glue on the wall, and Fibo Seal on cut surfaces

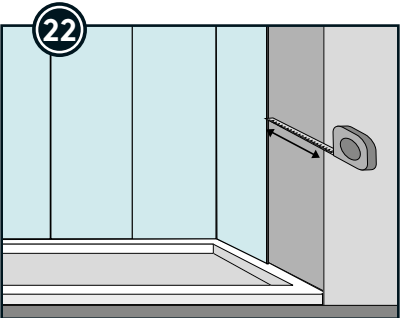


Measure last panel on return wall, cut to size, apply Fibo Seal on cut surfaces and attach to wall with glue

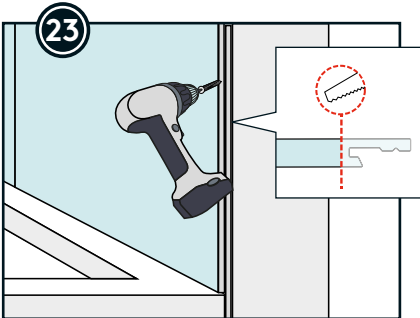


Countersink and attach with screws into stud with maximum 1/4 inch from the edge. The screw will be hidden with L-profile

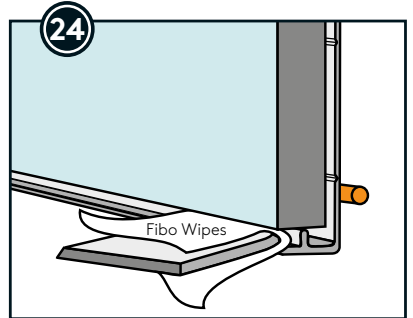


Clean with Fibo Wipes between panel and base profile, repeat between base profile and tray/bathtub

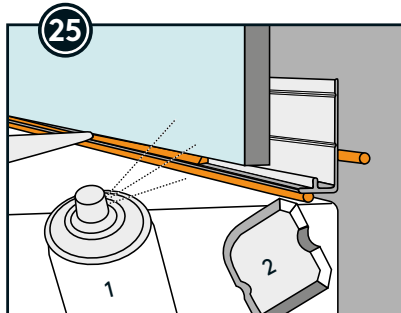



Apply Fibo Seal between panel and base profile, and between base profile and tray. Remove excess with Fibo Clean and sealing tool

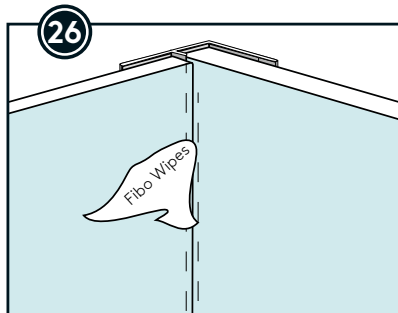

Use Fibo Wipes to clean the corner

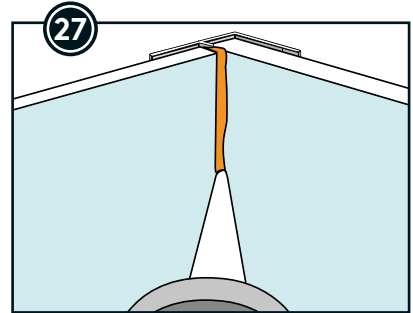

Apply Fibo Seal in corner and remove excess with Fibo Clean and Fibo Sealing Tool

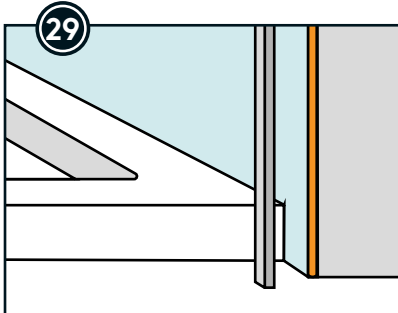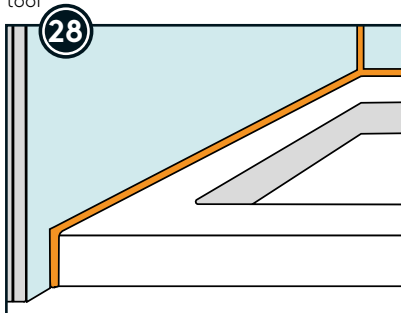

Install decorative L-shaped profile. Apply Fibo Seal in the profile and attach to wall

Cleaning

General information about detergents

Detergents for private consumers, as well as general detergents for large consumers, are rarely corrupt. However, they may seem irritating to the skin, the higher or lower pH value they have. Lukewarm water is for regular cleaning. Gloves should be used for prolonged contact with concentrated products or solutions, as the cleaning agents can dry out the skin. Be careful with inhalation of aerosols (shower/spray bottle) as these may irritate the mucous membranes.

Good advice

Always apply the detergent where it is the most "dirty" first and wipe these areas last so that the detergent will last for the longest time to work before drying out.

Daily/weekly cleaning

Alkaline - neutral detergent with pH value 7-10 and lukewarm water

Less frequent cleaning

Against deposits, lime, rust and irr use "acid" detergent with pH 1-5 and cold water. A viscous detergent that hangs on vertical surfaces can also be used.

Residues of soap and skin fat

Use "acid" detergent with pH 3-5. Or use "spray products" that dissolve fat - or careful use of "scouring creams".

Stain/Problem Spots

Spray products and liquid scouring creams are suitable for stain removal. The spray products are best suited because they do not contain water-soluble minerals. - Abrasives containing this must be rinsed or wiped off. Microfibre cloths with "fleece solvents" can also be used. In difficult spots, allow detergent to work, work area with washing pad, cloth, or similar. Melamine sponges together with dishwasher soap can be used on stains on structures such as GEM, C and STN.

Aluminium Profiles

There should be no corrosion as long as the pH of the detergent is above 4 or below 9. If chlorine is used on the profiles and rinses clean afterwards, it should also work well. Alkaline cleaner should be used with caution. There are mild alkaline cleaners designed for cleaning aluminum.

Sealant

Soap and skin residue should be removed from the sealant frequently to avoid fungi growth. If sealant is damaged it must be replaced according to the technical datasheet of the sealant.

Not doing so could void your warranty.

Common to all detergents is that one must follow the instructions carefully.

Over time the sealant may become brittle or damaged or partly peel away and therefore should be inspected routinely. As sealant degrades it will become more susceptible to mold infestation.

The sealant should also be cleaned regularly with the panels to prevent mold growth - particularly the bead of sealant at the base of the panels where water is most likely to pool. If the mould cannot be removed by cleaning and becomes impregnated in the sealant, then the sealant may need to be replaced.

If the sealant is damaged or breaks free from the panel surface, then it must be treated immediately. Replacing the sealant will take a bit of time and effort.

Maintenance

Replacing Sealant

1. Wash the area including the panels adjoining the sealant to clean off any grime and soap scum. This is an important initial step as it is best not to clean the panel after the sealant has been removed and the panel is exposed. Allow the area to completely dry.
2. There are a number of products that will loosen sealant including Soudal Sealant Remover or WD-40®. Whilst not essential, these will help loosen the sealant from the surfaces to which it is attached.
3. Slide a Stanley knife or razor down the length of the caulk seam on one side of the bead. Hold the tool so the blade doesn't cut into the panel or the floor, but cuts near to it instead (at the base). The aim is to cut the sealant loose on the first edge, without cutting through the entire bead or down into the joint.
4. Switch to the opposite side of the sealant bead and repeat the process, slicing through a point very close to where the sealant bonds to the tile. Avoid cutting so deeply that sealant bead is completely removed. Using just the tip of the knife on each side of the bead is enough.
5. Grab a loose edge of the sealant bead and peel it up and away from the floor, which should draw out the sealant that filled the joint as well, not just the visible portion of the sealant bead. Use a plastic scraper to remove any remaining traces.
6. Wipe the area where the sealant was present clean and apply new sealant.

Chips and Scratches

Small chips and scratches can be repaired by using a laminate repair kit, such as 'Unika Colorfill'; generally available on-line. Alternatively, a hard setting epoxy filler with an enamel paint can be used. Use a spatula to press filler into the chipped area, wipe away any excess. Once the filler has dried paint over the filler; if the paint comes in a spray can, then spray a small amount of paint into the lid of the can then use a fine brush or ear bud to apply. Matching colors may be difficult. It is possible with some repair products to mix colors to create a broader spectrum of colors. Note, that in most cases small scratches and chips should not affect the waterproofing properties of the panel. If unsure whether the waterproofing of the panel is affected, then either ensure the affected area remains dry or if that is not possible cover the damage with a temporary sealant until it can be properly assessed or repaired.

Aluminum Profiles

These are either powder coated or anodized and should remain free of any corrosion with normal usage. Aluminum is susceptible to corrode or become pitted if exposed to either low pH (acidic below pH 4) or high pH (alkaline over pH9). Strong acidic or alkaline cleaners should always be avoided. Small chips in the powder coating can be repaired using auto enamel paints, however it may not be possible to achieve an identical match to the powder coated finish, because of the baking process used in powder coating that cannot be replicated in-situ.

MANUFACTURERS LIMITED LIFETIME WARRANTY

RESIDENTIAL APPLICATION IN NORTH AMERICA



FIBO AS ("WE") WARRANTS THAT DURING THE WARRANTY PERIOD SPECIFIED BELOW, FIBO WALL PANEL AND KITCHEN BOARD (THE "PRODUCT") WILL BE FREE FROM DEFECTS IN MATERIALS AND MANUFACTURE IN ACCORDANCE WITH THE TERMS OF THIS LIMITED WARRANTY.

THIS LIMITED WARRANTY CAN ALSO BE FOUND ONLINE AT FIBOSYSTEMUSA.COM AND FIBOSYSTEMCANADA.COM.

WHO MAY USE THIS LIMITED LIFETIME WARRANTY?

We extend this limited warranty only to the end-consumer who originally purchased the Product ("you") and only when in its original location of installation. It does not extend to any subsequent owner of the Product.

WHAT DOES THIS LIMITED LIFETIME WARRANTY COVER?

The Product will not delaminate, stain, fade or crack during the Warranty Period as a result of defects in materials and manufacture of the Product, when properly installed in accordance with Fibo's installation instructions and cared for in accordance with Fibo's instructions for "Cleaning and Maintenance" or "Product Guide."

WHAT DOES THIS LIMITED LIFETIME WARRANTY NOT COVER?

This limited warranty does not cover any damage due to: (a) abuse, misuse, or improper installation; (b) failure to follow the product instructions or to perform preventive maintenance; (c) incorrect seal or modifications; (d) unauthorized repair; (e) external causes such as natural events, fire, accidents, infestation and other actions or events beyond our reasonable control; (f) use in vicinity of high moisture (e.g. swimming pool, hot tub) or extreme heat (e.g. spa, sauna, steam room); (g) use outdoors; (h) movement of the building due to land slip, failure of a foundation or the underlining building structure; and (i) normal wear and tear. This limited warranty does not cover any labor or other costs of removal or installation.

WHAT IS THE PERIOD OF COVERAGE?

This limited warranty starts on the date of your purchase and lasts for the lifetime of the installation for residential applications (the "Warranty Period"). The Warranty Period is not extended if we repair or replace the Product. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

WHAT ARE YOUR REMEDIES UNDER THIS WARRANTY?

If, after inspection by an authorized Fibo representative, we determine a Product is defective during the Warranty Period, we will, in our sole discretion, either: (a) repair or replace such Product (or the defective portion), or (b) refund the purchase price of such Product [amortized over 50 years]. We retain the right to replace the Product with a similar product.

Fibo's option to repair or replace the Products under this limited warranty does not cover labor or other costs of removal or installation.

HOW DO YOU OBTAIN WARRANTY SERVICE?

To obtain warranty service, you must email our Customer Service Department at info@fibosystem.com during the Warranty Period. For requesting warranty service if you are a consumer, please contact your distributor with information about your claim and purchase evidence. Next step is for the distributor to send consumer claim, Fibo invoice number and/or code on back of panel to info@fibosystem.com.

LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS LIMITED WARRANTY STATEMENT AND TO THE EXTENT NOT PROHIBITED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES, SO THIS DISCLAIMER MAY NOT APPLY TO YOU. TO THE EXTENT SUCH WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR JURISDICTION, WE LIMIT THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

MANUFACTURERS LIMITED WARRANTY

NON-RESIDENTIAL APPLICATION IN NORTH AMERICA

FIBO AS ("WE") WARRANTS THAT DURING THE WARRANTY PERIOD SPECIFIED BELOW, FIBO WALL PANEL AND KITCHEN BOARD (THE "PRODUCT") WILL BE FREE FROM DEFECTS IN MATERIALS AND MANUFACTURE IN ACCORDANCE WITH THE TERMS OF THIS LIMITED WARRANTY.

THIS LIMITED WARRANTY CAN ALSO BE FOUND ONLINE AT FIBOSYSTEMUSA.COM AND FIBOSYSTEMCANADA.COM.

WHO MAY USE THIS LIMITED 25 YEAR WARRANTY?

We extend this limited warranty only to the end-consumer who originally purchased the Product ("you") and only when in its original location of installation. It does not extend to any subsequent owner of the Product.

WHAT DOES THIS LIMITED 25 YEAR WARRANTY COVER?

The Product will not delaminate, stain, fade or crack during the Warranty Period as a result of defects in materials and manufacture of the Product, when properly installed in accordance with Fibo's installation instructions and cared for in accordance with Fibo's instructions for "Cleaning and Maintenance" or "Product Guide."

WHAT DOES THIS LIMITED 25 YEAR WARRANTY NOT COVER?

This limited warranty does not cover any damage due to: (a) abuse, misuse, or improper installation; (b) failure to follow the product instructions or to perform preventive maintenance; (c) incorrect seal or modifications; (d) unauthorized repair; (e) external causes such as natural events, fire, accidents, infestation and other actions or events beyond our reasonable control; (f) use in vicinity of high moisture (e.g. swimming pool, hot tub) or extreme heat (e.g. spa, sauna, steam room); (g) use outdoors; (h) movement of the building due to land slip, failure of a foundation or the underlining building structure; and (i) normal wear and tear. This limited warranty does not cover any labor or other costs of removal or installation.

WHAT IS THE PERIOD OF COVERAGE?

This limited warranty starts on the date of your purchase and lasts for 25 years for non-residential applications (the "Warranty Period"). The Warranty Period is not extended if we repair or replace the Product. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

WHAT ARE YOUR REMEDIES UNDER THIS WARRANTY?

If, after inspection by an authorized Fibo representative, we determine a Product is defective during the Warranty Period, we will, in our sole discretion, either: (a) repair or replace such Product (or the defective

portion), or (b) refund the purchase price of such Product [amortized over 25 years]. We retain the right to replace the Product with a similar product.

Fibo's option to repair or replace the Products under this limited warranty does not cover labor or other costs of removal or installation.

HOW DO YOU OBTAIN WARRANTY SERVICE?

To obtain warranty service, you must email our Customer Service Department at info@fibosystem.com during the Warranty Period. For requesting warranty service if you are a consumer, please contact your distributor with information about your claim and purchase evidence. Next step is for the distributor to send consumer claim, Fibo invoice number and/or code on back of panel to info@fibosystem.com.

LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS LIMITED WARRANTY STATEMENT AND TO THE EXTENT NOT PROHIBITED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES, SO THIS DISCLAIMER MAY NOT APPLY TO YOU. TO THE EXTENT SUCH WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR JURISDICTION, WE LIMIT THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Tests and approvals

- UL 723 fire test
- CARB 93120 ATCM compliant
- TSCA Title VI compliant
- ASTM E1333 Emission test



BUILDING UNITS
R39061



LAMINATED PANEL
R39061
LISTED IN ACCORDANCE WITH
CAN/ULC-5102



Fremmer bærekraftig
forvaltning av skog
www.pefc.no





A smart way
to transform
your wall