


INSTALLATION WITH COMBI PROFILE

Use a 12 mm plywood, or 23x48 mm strips mounted vertically at each corner, and horizontally if using wooden strips with c/c 30 cm. It is particularly important that there is a horizontal stud behind the Fibo panel, where the bottom of the toilet bowl if fitted.

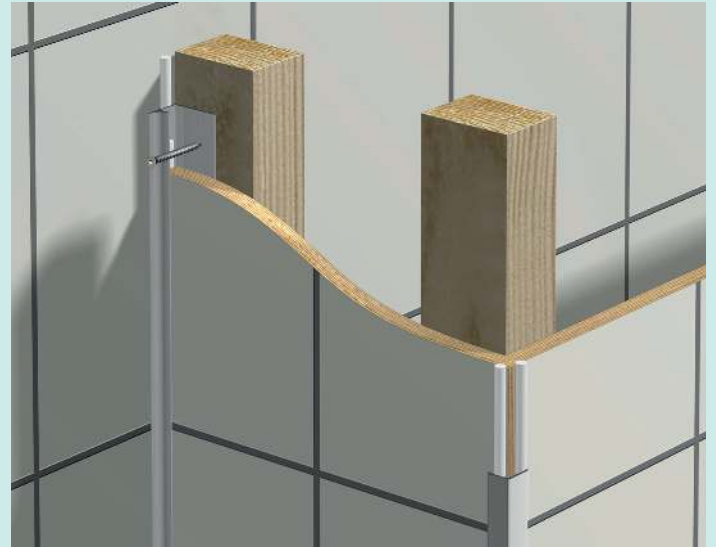

From the rear wall, the combi profile can be used as illustrated in the picture. This is screwed into the vertical stud. If this is an area that is exposed to water splashes, we also recommend sealing with sealant so that watertight transitions from the laminate side to the profile.

The panel joints on the outside corners can either be worn with L-profile narrow or L-profile wide. Alternative it can be solved with an aluminium external corner profile



FINISHED!