

HIDDEN CORNER PROFILE INSTALLATION




Start the installation above the door.
Profile comes predrilled.
Corner profile fixed into the back of the panel with a special screws as shown (included in the package of profile). In the shower area all edges lubricated with Fibo Seal or other MS Polymer sealant.



The inner corner profile fixed to the upright in pre finished countersunk holes.
Fit the next panel in width and height, apply sealant on the edges and slide the panel into the corner.



Apply sealant (MS Polymer) in the corner (preferably using masking tape for the best possible result).
Clean with Fibo clean, Fibo fug and Fibo Wipes or alternative cleaners.

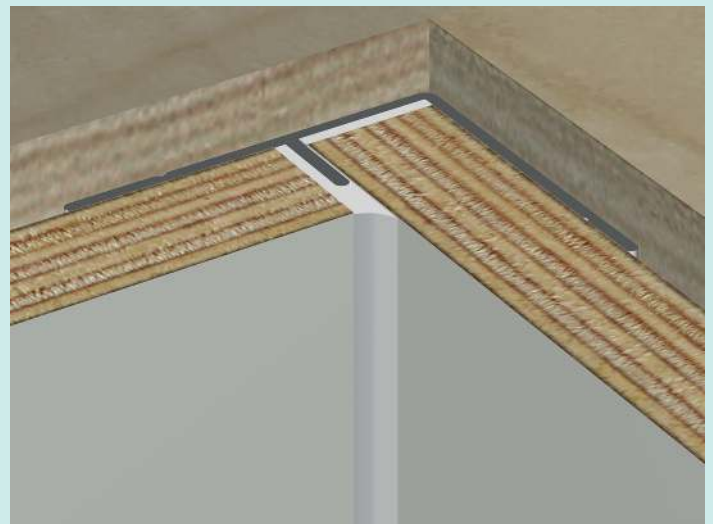

Finished!