



Wall panels for dry rooms

INSTALLATION INSTRUCTION



VITO WALL PANEL




VITO LACQUERED VENEER PANEL



VITO POPLAR PANEL

DRY ROOMS ONLY

designbyfibo

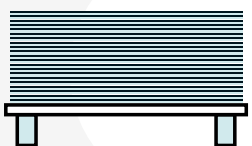

STORAGE/TERMS OF CONDITION

Keep the panels stored dry and flat in their packaging until installation. Humidity: 30-60%. Temperature: 15-30 C°. Panels must be kept at minimum 3 days (72 h) in these conditions before installation.



VISUAL INSPECTION


Check for product flaws before installation. Colour differences may occur on natural products.




DO NOT USE IN SHOWERS OR OTHER WET ROOMS!

These panels are designed solely for dry rooms and are not suitable for installation in wet areas.


RECOMMENDED ACCESSORIES

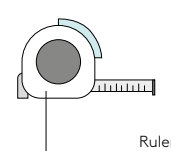


Ruler

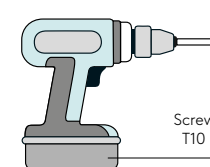


Screwdriver with T10 bit and drill

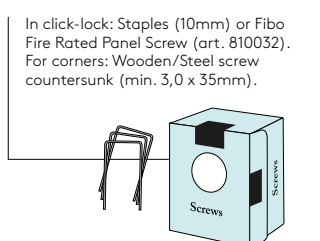


In click-lock: Staples (10mm) or Fibo Fire Rated Panel Screw (art. 810032). For corners: Wooden/Steel screw countersunk (min. 3,0 x 35mm).

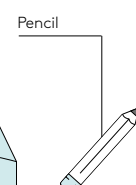

Pencil



Level or laser




Hole saw



Wooden Glue




Click wax/
Candle light wax

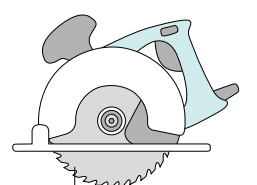


Hand saw/Jigsaw/Circular saw


CHOOSE PREFERRED BACKWALL OPTIONS

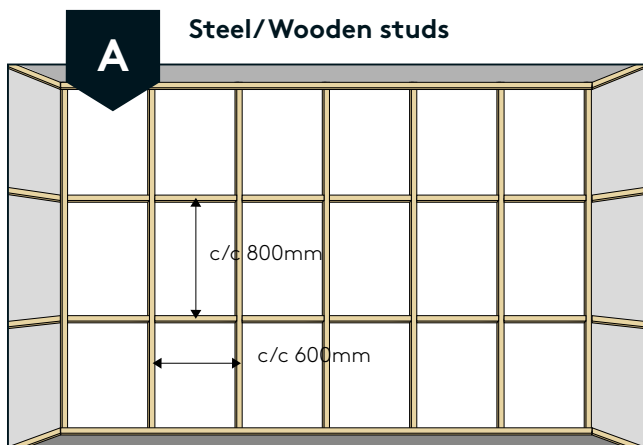

Wooden or steel studs with recommended distances as shown in the illustration.

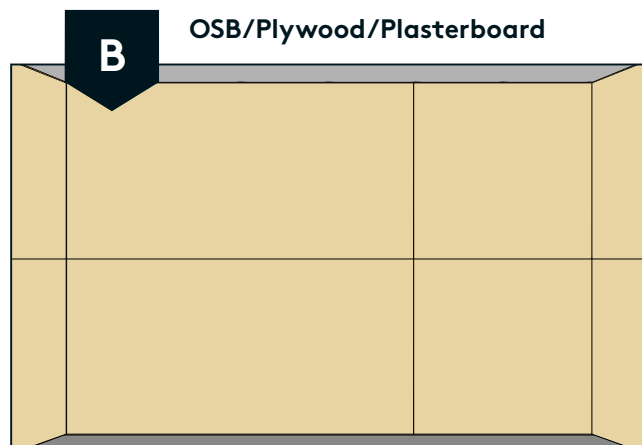


Full-covering wall. Installed horizontally or vertically. Mark the rear studs for secure fastening if using plasterboards.

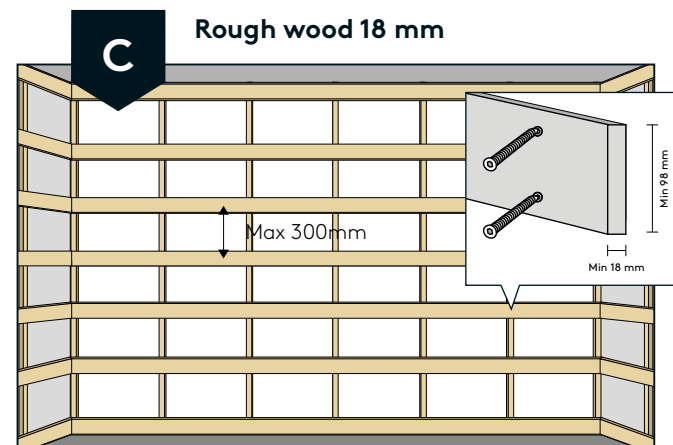


Horizontal battens (e.g., rough wood) with a maximum spacing of 300 mm between battens.


FOLLOWING THE INSTALLATION INSTRUCTIONS ENSURES OPTIMAL RESULTS

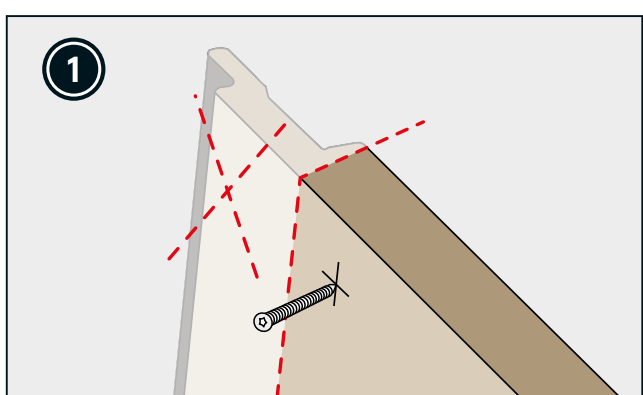


Clean cut first panel. Fasten to the back wall with screws or staples.

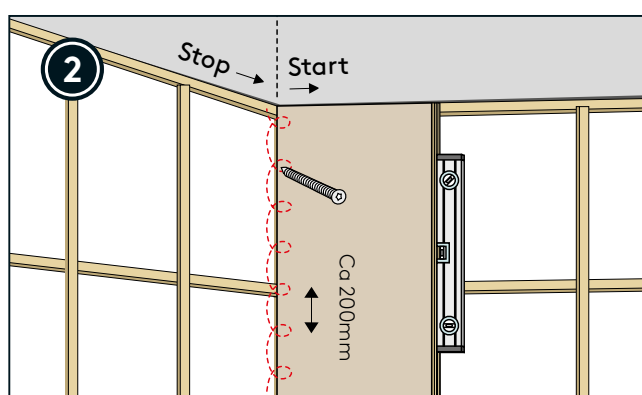


Make sure you fit the first panel plum. Fasten with screws or staples. Between floor/wall and floor/ceiling leave a 5 mm expansion gap.

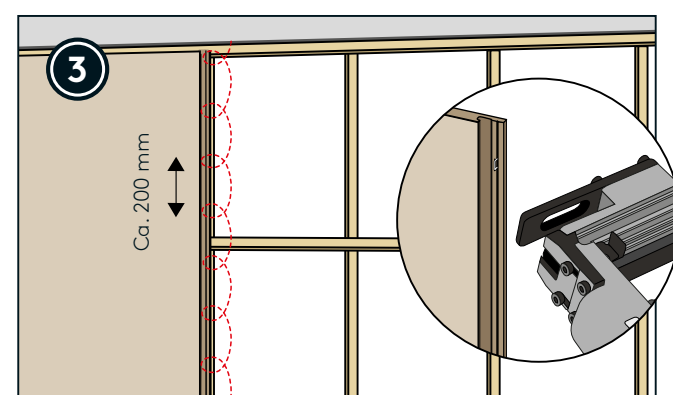


Staples are recommended in the click-lock. If using screws, Fibo Fire Rated Panel Screws can be used. Ideal distance is approximately 200 mm.

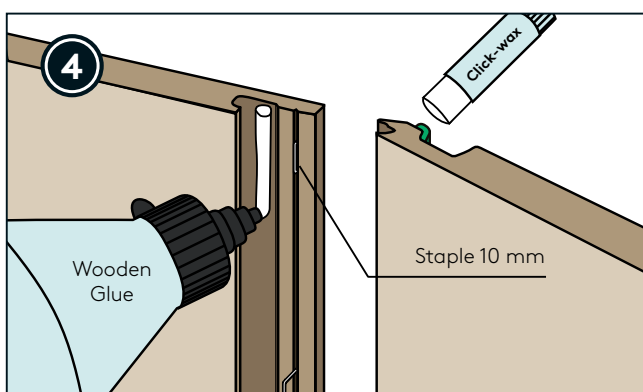


Use wooden glue and Click-wax as shown. Use a gentle rocking movement to prevent damage when connecting the panels. Remove any glue residues from the surface with a damp cloth.

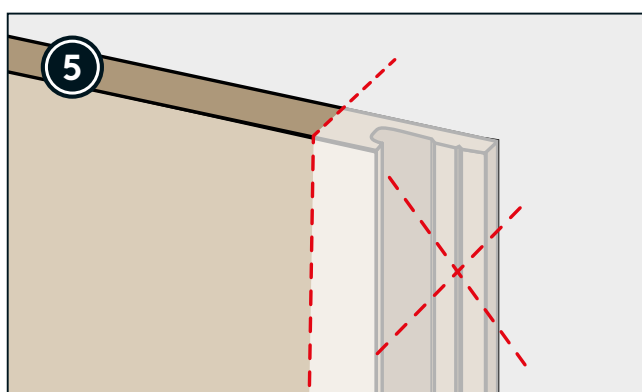


Measure and cut last panel before corner.

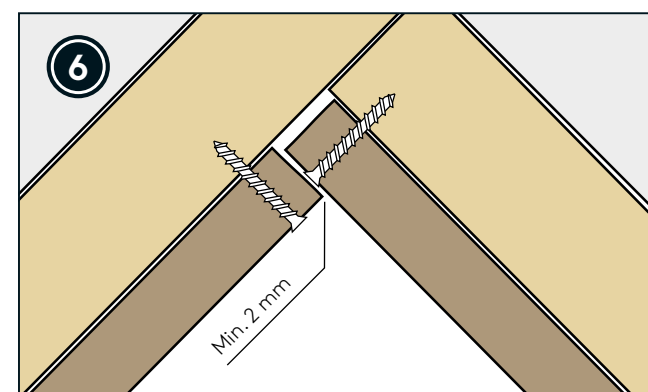

Fasten last panel against corner with screws or staples. The screw/staple will be hidden with putty or acrylic sealant.

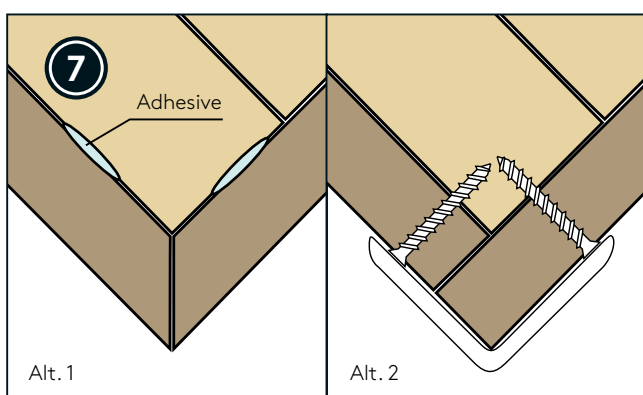

Alt. 1: Mitre the external corner 45°. Use adhesive where the panels meet and fasten with screws in top and bottom of the panel. It is important to brace until the adhesive has dried.
Alt. 2: Clean cut the panel edge facing the corner, and fasten with screws. Cover the corner with preferred external profile.

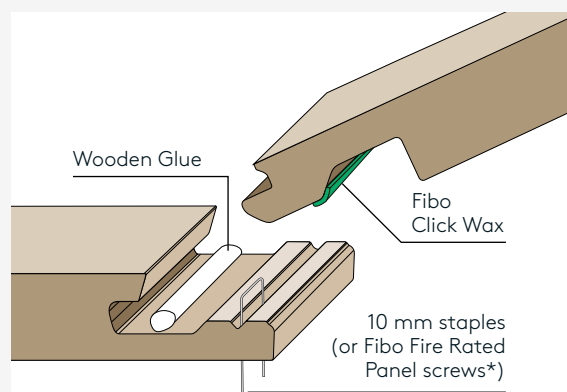

ESSENTIAL FOR THE OPTIMAL RESULT

To reduce the risk of gaps in the joints due to low humidity and movement, wooden glue should be used in the click-lock as shown.

Apply Click-Wax behind the click-lock to ease the installation when clicking the panels together.

* If using screws in click, it is highly recommended to use Fibo Fire Rated Panel screw art. 810032.

FOR USE IN DRY ROOMS ONLY



WALLS BUILT FOR LIFE

info@fibosystem.com